Oster

User Manual **Toaster**

Manuel d'instructions **Grille-pain**

MODEL/MODÈLES/MODELOS **6340, 6341**

Visit us at www.oster.com

P/N 122453 MAY11

English-1

IMPORTANT SAFEGUARDS

WARNING – When using electric appliances, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE

- To protect against risk of electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the toaster.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- Do not use outdoors or for commercial purposes.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn control to any setting, then remove plug from wall outlet. Always grasp plug and pull from outlet; never pull by cord.
- Do not use appliance for other than intended use.
- Do not use harsh abrasives when cleaning the appliance. Such abrasives can damage the surface.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not operate toaster if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been left outdoors or dropped into water. Return toaster to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Do not attempt to defeat any of the safety devices.
- Do not operate toaster without crumb tray in place.
- Do not store any materials, other than toaster accessories, in the toaster when not in use.
- Do not cover toaster with flammable material (e.g., paper, cloth, plastic bags, curtains, etc.) when in use.
- Do not use toaster to heat a room.
- Do not use toaster for anything other than toasting bread.
- Do not insert foil, paper, or plastic into toaster.
- Do not toast bagels, English muffins, pastries, or thick breads.
- Do not use toaster if bread is too thick.
- Do not use toaster if bread is frozen.
- Do not use toaster if bread is too large.
- Do not use toaster if bread has metal twist ties.
- Do not use toaster if bread has fruit, jelly, or other high sugar content toppings.
- Do not use toaster if bread has butter, margarine, or other high fat content toppings.
- Do not use toaster if bread has cheese, eggs, or other high protein content toppings.
- Do not use toaster if bread has cinnamon sugar toppings.
- Do not use toaster if bread has honey toppings.
- Do not use toaster if bread has chocolate toppings.
- Do not use toaster if bread has peanut butter toppings.
- Do not use toaster if bread has jam toppings.
- Do not use toaster if bread has marmalade toppings.
- Do not use toaster if bread has maple syrup toppings.
- Do not use toaster if bread has molasses toppings.
- Do not use toaster if bread has sugar toppings.
- Do not use toaster if bread has artificial sweetener toppings.
- Do not use toaster if bread has fruit toppings.
- Do not use toaster if bread has vegetable toppings.
- Do not use toaster if bread has meat toppings.
- Do not use toaster if bread has fish toppings.
- Do not use toaster if bread has poultry toppings.
- Do not use toaster if bread has seafood toppings.
- Do not use toaster if bread has nut toppings.
- Do not use toaster if bread has seed toppings.
- Do not use toaster if bread has spice toppings.
- Do not use toaster if bread has herb toppings.
- Do not use toaster if bread has vegetable toppings.
- Do not use toaster if bread has meat toppings.
- Do not use toaster if bread has fish toppings.
- Do not use toaster if bread has poultry toppings.
- Do not use toaster if bread has seafood toppings.
- Do not use toaster if bread has nut toppings.
- Do not use toaster if bread has seed toppings.
- Do not use toaster if bread has spice toppings.
- Do not use toaster if bread has herb toppings.

SAVE THESE INSTRUCTIONS

Features and Benefits

Please read carefully before first use.

- Toasts bread to your desired darkness
- Defrost button
- Bagel button
- Reheat button
- Cancel button
- Extra wide slots
- Lift lever
- Removable crumb tray
- Cord storage
- Cool touch housing
- Non-skid feet

Before First Use

Remove any packaging material and promotional labels from the toaster. Wipe the interior with a damp cloth and the exterior with a soft, damp cloth. Dry thoroughly.

Operating the Toaster

1. Ensure toaster is unplugged and cool.
2. Remove crumb tray by pulling it out from the bottom of the toaster.
3. Empty crumbs into the sink or trash can.
4. Replace crumb tray.
5. Place bread in slots. Slots are extra wide to accommodate bagels, thick breads, and pastries.
6. Select desired toasting function.
7. Select desired shade setting. Darkness increases from 1 to 7.
8. Press down lever until it locks in place. The toaster will begin toasting.
9. To cancel toasting cycle at any time, press the Cancel button.
10. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove toast.

Toasting Frozen Waffles

1. Select Waffle function.
2. Select desired shade setting.
3. Place waffle in slot.
4. Press down lever until it locks in place. The toaster will begin toasting.
5. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove waffle.

Toasting Frozen Pastries

1. Select Pastry function.
2. Select desired shade setting.
3. Place pastry in slot.
4. Press down lever until it locks in place. The toaster will begin toasting.
5. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove pastry.

Toasting Bagels

1. Select Bagel function.
2. Select desired shade setting.
3. Place bagel in slot.
4. Press down lever until it locks in place. The toaster will begin toasting.
5. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove bagel.

Reheating Toast

1. Select Reheat function.
2. Select desired shade setting.
3. Place toast in slot.
4. Press down lever until it locks in place. The toaster will begin toasting.
5. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove toast.

Defrosting Frozen Bread

1. Select Defrost function.
2. Select desired shade setting.
3. Place bread in slot.
4. Press down lever until it locks in place. The toaster will begin toasting.
5. When toasting is complete, the toaster will automatically shut off. Lift the lever to remove bread.

Canceling Toast Function

To cancel toasting at any time, press the Cancel button. The toaster will shut off and the lever will release.

Cleaning the Toaster

1. Ensure toaster is unplugged and cool.
2. Remove crumb tray and empty crumbs.
3. Wipe exterior with a damp cloth.
4. Dry thoroughly.

Cleaning the Crumb Tray

1. Remove crumb tray from toaster.
2. Empty crumbs into the sink or trash can.
3. Wash crumb tray with warm, soapy water.
4. Dry thoroughly.
5. Replace crumb tray in toaster.

Cleaning the Exterior Housing

1. Ensure toaster is unplugged and cool.
2. Wipe exterior with a damp cloth.
3. Dry thoroughly.

Cleaning the Cord

1. Ensure toaster is unplugged and cool.
2. Wipe cord with a damp cloth.
3. Dry thoroughly.

Storing the Toaster

1. Ensure toaster is unplugged and cool.
2. Wrap cord around the cord storage area on the bottom of the toaster.
3. Store toaster in a dry, cool place.

Troubleshooting

Problem	Possible Cause	Solution
Toaster will not operate	Toaster is not plugged in	Plug toaster into a working outlet
	Toaster is not turned on	Select a toasting function
	Lever is not locked down	Press down lever until it locks in place
Toast is not dark enough	Shade setting is too low	Select a higher shade setting
Toast is too dark	Shade setting is too high	Select a lower shade setting
Bread is not toasting evenly	Bread is not placed correctly in slots	Ensure bread is centered in slots
Toaster is smoking	Crumb tray is full	Empty crumb tray
	Bread is too close to the heating elements	Ensure bread is centered in slots
Toaster is not working properly	Toaster is damaged	Return toaster to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment

Limited Three-Year Warranty

This product is warranted for three years against defects in materials and workmanship. For complete warranty information, please visit www.oster.com.

Visit us at www.oster.com

Español-1

PRECAUCIONES IMPORTANTES

Cuando emplee aparatos de corriente, especialmente de seguridad básicas, siempre debe tomar en consideración las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

- Para protegerse contra el riesgo de descarga eléctrica, no sumerja el cable, el enchufe ni la tostadora en agua ni en otro líquido.
- Es necesario supervisar de cerca el uso de cualquier aparato por parte de niños o cerca de ellos.
- Desenchufe el aparato cuando no lo esté utilizando y antes de limpiarlo. Deje que se enfríe antes de colocar o retirar piezas y antes de limpiar la tostadora.
- Evite el contacto con piezas móviles.
- No utilice ningún aparato con el cable o el enchufe dañados o después de que el aparato haya funcionado mal o se haya dañado de cualquier manera. Devuelva el aparato al centro de servicio autorizado más cercano para su examen, reparación o ajuste eléctrico o mecánico.
- El uso de aditamentos no recomendados o vendidos por el fabricante del aparato puede causar incendios, descargas eléctricas o lesiones.
- No lo use en exteriores ni para fines comerciales.
- No deje que el cable cuelgue sobre el borde de la mesa o la encimera ni que entre en contacto con superficies calientes.
- No lo coloque sobre o cerca de un quemador de gas o eléctrico ni en un horno caliente.
- Se debe tener sumo cuidado al trasladar un aparato que contenga aceite caliente u otros líquidos calientes.
- Para desconectarlo, gire el control a cualquier posición, luego retire el enchufe de la toma de corriente. Siempre sujete el enchufe y tire de él para desenchufarlo; nunca tire del cable.
- No utilice el aparato para otro fin que no sea el previsto.
- No utilice productos abrasivos fuertes para limpiar el aparato. Estos productos pueden dañar la superficie.
- No limpie con estropajos metálicos. Los trozos pueden desprenderse del estropajo y tocar piezas eléctricas, lo que supone un riesgo de descarga eléctrica.
- No utilice la tostadora si el cable o el enchufe están dañados, si no funciona correctamente, si se ha caído o dañado de alguna manera o si se ha caído en agua. Devuelva la tostadora al centro de servicio autorizado más cercano para su inspección, ajuste mecánico o eléctrico o reparación.
- No intente anular ninguno de los dispositivos de seguridad.
- No utilice la tostadora sin la bandeja migajera en su lugar.
- No guarde ningún material que no sea un accesorio de la tostadora en su interior cuando no esté en uso.
- No cubra la tostadora con material inflamable (por ejemplo, papel, tela, bolsas de plástico, cortinas, etc.) cuando esté en uso.
- No utilice la tostadora para calentar una habitación.
- No utilice la tostadora para ningún otro fin que no sea tostar pan.
- No introduzca papel de aluminio, papel ni plástico en la tostadora.
- No tueste bagels, panecillos ingleses, pasteles ni panes gruesos.
- No utilice la tostadora si el pan es demasiado grueso.
- No utilice la tostadora si el pan está congelado.
- No utilice la tostadora si el pan es demasiado grande.
- No utilice la tostadora si el pan tiene alambres metálicos.
- No utilice la tostadora si el pan tiene ingredientes con alto contenido de azúcar, como mermelada, miel, melaza, azúcar, edulcorantes artificiales, fruta, verduras, carne, pescado, aves de corral, marisco, nueces, semillas, especias o hierbas.
- No utilice la tostadora si el pan tiene ingredientes con alto contenido de grasa, como mantequilla, margarina, queso, huevos o ingredientes con alto contenido de proteínas.
- No utilice la tostadora si el pan tiene canela y azúcar.
- No utilice la tostadora si el pan tiene miel.
- No utilice la tostadora si el pan tiene chocolate.
- No utilice la tostadora si el pan tiene mantequilla de cacahuete.
- No utilice la tostadora si el pan tiene mermelada.
- No utilice la tostadora si el pan tiene jarabe de arce.
- No utilice la tostadora si el pan tiene melaza.
- No utilice la tostadora si el pan tiene azúcar.
- No utilice la tostadora si el pan tiene edulcorante artificial.
- No utilice la tostadora si el pan tiene fruta.
- No utilice la tostadora si el pan tiene verduras.
- No utilice la tostadora si el pan tiene carne.
- No utilice la tostadora si el pan tiene pescado.
- No utilice la tostadora si el pan tiene aves de corral.
- No utilice la tostadora si el pan tiene marisco.
- No utilice la tostadora si el pan tiene nueces.
- No utilice la tostadora si el pan tiene semillas.
- No utilice la tostadora si el pan tiene especias.
- No utilice la tostadora si el pan tiene hierbas.
- No utilice la tostadora si el pan tiene verduras.
- No utilice la tostadora si el pan tiene carne.
- No utilice la tostadora si el pan tiene pescado.
- No utilice la tostadora si el pan tiene aves de corral.
- No utilice la tostadora si el pan tiene marisco.
- No utilice la tostadora si el pan tiene nueces.
- No utilice la tostadora si el pan tiene semillas.
- No utilice la tostadora si el pan tiene especias.
- No utilice la tostadora si el pan tiene hierbas.

GUARDE ESTAS INSTRUCCIONES

Instrucciones para el Cordón de extensión

Cordones de alimentación y cordones de extensión

- Este electrodoméstico tiene un cable de alimentación con toma de tierra. Para reducir el riesgo de descargas eléctricas, este enchufe debe conectarse únicamente a una toma de corriente con toma de tierra que cumpla con la normativa local y nacional. No modifique el enchufe. Si no encaja en la toma de corriente, solicite a un electricista cualificado que instale una toma de corriente adecuada.
- Si el cable de alimentación está dañado, debe ser sustituido por el fabricante, su agente de servicio técnico o una persona con una cualificación similar para evitar cualquier peligro.
- Si se utiliza un cordón de extensión, asegúrese de que la clavija del cordón de extensión tiene el mismo número de polos y de que es compatible con el enchufe del electrodoméstico. El cordón de extensión debe estar en buen estado y tener un cable de sección transversal suficiente para soportar la corriente del electrodoméstico. Un cordón de extensión de sección transversal insuficiente provocará una caída de tensión que dará lugar a una pérdida de potencia y un sobrecalentamiento. Utilice un cordón de extensión con toma de tierra de 3 hilos.
- Para reducir el riesgo de descargas eléctricas, no sumerja el cable, el enchufe ni la tostadora en agua ni en otro líquido.
- Es necesario supervisar de cerca el uso de cualquier aparato por parte de niños o cerca de ellos.
- Desenchufe el aparato cuando no lo esté utilizando y antes de limpiarlo. Deje que se enfríe antes de colocar o retirar piezas y antes de limpiar la tostadora.
- Evite el contacto con piezas móviles.
- No utilice ningún aparato con el cable o el enchufe dañados o después de que el aparato haya funcionado mal o se haya dañado de cualquier manera. Devuelva el aparato al centro de servicio autorizado más cercano para su examen, reparación o ajuste eléctrico o mecánico.
- El uso de aditamentos no recomendados o vendidos por el fabricante del aparato puede causar incendios, descargas eléctricas o lesiones.
- No lo use en exteriores ni para fines comerciales.
- No deje que el cable cuelgue sobre el borde de la mesa o la encimera ni que entre en contacto con superficies calientes.
- No lo coloque sobre o cerca de un quemador de gas o eléctrico ni en un horno caliente.
- Se debe tener sumo cuidado al trasladar un aparato que contenga aceite caliente u otros líquidos calientes.
- Para desconectarlo, gire el control a cualquier posición, luego retire el enchufe de la toma de corriente. Siempre sujete el enchufe y tire de él para desenchufarlo; nunca tire del cable.
- No utilice el aparato para otro fin que no sea el previsto.
- No utilice productos abrasivos fuertes para limpiar el aparato. Estos productos pueden dañar la superficie.
- No limpie con estropajos metálicos. Los trozos pueden desprenderse del estropajo y tocar piezas eléctricas, lo que supone un riesgo de descarga eléctrica.
- No utilice la tostadora si el cable o el enchufe están dañados, si no funciona correctamente, si se ha caído o dañado de alguna manera o si se ha caído en agua. Devuelva la tostadora al centro de servicio autorizado más cercano para su inspección, ajuste mecánico o eléctrico o reparación.
- No intente anular ninguno de los dispositivos de seguridad.
- No utilice la tostadora sin la bandeja migajera en su lugar.
- No guarde ningún material que no sea un accesorio de la tostadora en su interior cuando no esté en uso.
- No cubra la tostadora con material inflamable (por ejemplo, papel, tela, bolsas de plástico, cortinas, etc.) cuando esté en uso.
- No utilice la tostadora para calentar una habitación.
- No utilice la tostadora para ningún otro fin que no sea tostar pan.
- No introduzca papel de aluminio, papel ni plástico en la tostadora.
- No tueste bagels, panecillos ingleses, pasteles ni panes gruesos.
- No utilice la tostadora si el pan es demasiado grueso.
- No utilice la tostadora si el pan está congelado.
- No utilice la tostadora si el pan es demasiado grande.
- No utilice la tostadora si el pan tiene alambres metálicos.
- No utilice la tostadora si el pan tiene ingredientes con alto contenido de azúcar, como mermelada, miel, melaza, azúcar, edulcorantes artificiales, fruta, verduras, carne, pescado, aves de corral, marisco, nueces, semillas, especias o hierbas.
- No utilice la tostadora si el pan tiene ingredientes con alto contenido de grasa, como mantequilla, margarina, queso, huevos o ingredientes con alto contenido de proteínas.
- No utilice la tostadora si el pan tiene canela y azúcar.
- No utilice la tostadora si el pan tiene miel.
- No utilice la tostadora si el pan tiene chocolate.
- No utilice la tostadora si el pan tiene mantequilla de cacahuete.
- No utilice la tostadora si el pan tiene mermelada.
- No utilice la tostadora si el pan tiene jarabe de arce.
- No utilice la tostadora si el pan tiene melaza.
- No utilice la tostadora si el pan tiene azúcar.
- No utilice la tostadora si el pan tiene edulcorante artificial.
- No utilice la tostadora si el pan tiene fruta.
- No utilice la tostadora si el pan tiene verduras.
- No utilice la tostadora si el pan tiene carne.
- No utilice la tostadora si el pan tiene pescado.
- No utilice la tostadora si el pan tiene aves de corral.
- No utilice la tostadora si el pan tiene marisco.
- No utilice la tostadora si el pan tiene nueces.
- No utilice la tostadora si el pan tiene semillas.
- No utilice la tostadora si el pan tiene especias.
- No utilice la tostadora si el pan tiene hierbas.
- No utilice la tostadora si el pan tiene verduras.
- No utilice la tostadora si el pan tiene carne.
- No utilice la tostadora si el pan tiene pescado.
- No utilice la tostadora si el pan tiene aves de corral.
- No utilice la tostadora si el pan tiene marisco.
- No utilice la tostadora si el pan tiene nueces.
- No utilice la tostadora si el pan tiene semillas.
- No utilice la tostadora si el pan tiene especias.
- No utilice la tostadora si el pan tiene hierbas.

Características y beneficios

Lea atentamente antes de usar por primera vez.

- Tuesta el pan hasta el tono deseado
- Botón Descongelar
- Botón Bagel
- Botón Recalentar
- Botón Cancelar
- Ranuras extra anchas
- Palanca
- Bandeja migajera extraíble
- Compartimento para el cable
- Carcasa fría al tacto
- Patas antideslizantes

Antes del primer uso

Retire todo el material de embalaje y las etiquetas promocionales de la tostadora. Limpie el interior con un paño húmedo y el exterior con un paño suave y húmedo. Seque bien.

Uso de la tostadora

1. Asegúrese de que la tostadora está desenchufada y fría.
2. Retire la bandeja migajera tirando de ella desde la parte inferior de la tostadora.
3. Vacíe las migas en el fregadero o en la basura.
4. Vuelva a colocar la bandeja migajera.
5. Introduzca el pan en las ranuras. Las ranuras son extra anchas para acomodar bagels, panes gruesos y pastas.
6. Seleccione la función de tostado deseada.
7. Seleccione el nivel de tostado deseado. El nivel de tostado aumenta del 1 al 7.
8. Baje la palanca hasta que encaje en su lugar. La tostadora comenzará a funcionar.
9. Para cancelar el ciclo de tostado en cualquier momento, pulse el botón Cancelar.
10. Cuando el tostado haya finalizado, la tostadora se apagará automáticamente. Levante la palanca para retirar el pan.

Tostado de panes congelados

1. Seleccione la función Congelado.
2. Seleccione el nivel de tostado deseado.
3. Introduzca el pan congelado en la ranura.
4. Baje la palanca hasta que encaje en su lugar. La tostadora comenzará a funcionar.
5. Cuando el tostado haya finalizado, la tostadora se apagará automáticamente. Levante la palanca para retirar el pan.

Tostado de bagels

1. Seleccione la función Bagel.
2. Seleccione el nivel de tostado deseado.
3. Introduzca el bagel en la ranura.
4. Baje la palanca hasta que encaje en su lugar. La tostadora comenzará a funcionar.
5. Cuando el tostado haya finalizado, la tostadora se apagará automáticamente. Levante la palanca para retirar el bagel.

Recalentado de pan tostado

1. Seleccione la función Recalentar.
2. Seleccione el nivel de tostado deseado.
3. Introduzca el pan tostado en la ranura.
4. Baje la palanca hasta que encaje en su lugar. La tostadora comenzará a funcionar.
5. Cuando el tostado haya finalizado, la tostadora se apagará automáticamente. Levante la palanca para retirar el pan.

Descongelado de pan congelado

1. Seleccione la función Descongelar.
2. Seleccione el nivel de tostado deseado.
3. Introduzca el pan en la ranura.
4. Baje la palanca hasta que encaje en su lugar. La tostadora comenzará a funcionar.
5. Cuando el tostado haya finalizado, la tostadora se apagará automáticamente. Levante la palanca para retirar el pan.

Cancelación de la función de tostado

Para cancelar el tostado en cualquier momento, pulse el botón Cancelar. La tostadora se apagará y la palanca se soltará.

Limpieza de la tostadora

1. Asegúrese de que la tostadora está desenchufada y fría.
2. Retire la bandeja migajera y vacíe las migas en el fregadero o en la basura.
3. Limpie el exterior con un paño húmedo.
4. Seque bien.

Limpieza de la bandeja migajera

1. Retire la bandeja migajera de la tostadora.
2. Vacíe las migas en el fregadero o en la basura.
3. Lave la bandeja migajera con agua caliente y jabón.
4. Seque bien.
5. Vuelva a colocar la bandeja migajera en la tostadora.

Limpieza de la carcasa exterior

1. Asegúrese de que la tostadora está desenchufada y fría.
2. Limpie el exterior con un paño húmedo.
3. Seque bien.

Limpieza del cable

1. Asegúrese de que la tostadora está desenchufada y fría.
2. Limpie el cable con un paño húmedo.
3. Seque bien.

Almacenamiento de la tostadora

1. Asegúrese de que la tostadora está desenchufada y fría.
2. Enrolle el cable alrededor del compartimento para el cable situado en la parte inferior de la tostadora.
3. Guarde la tostadora en un lugar seco y fresco.

Solución de problemas

Problema	Causa posible	Solución
La tostadora no funciona	La tostadora no está enchufada	Enchufe la tostadora a una toma de corriente en buen estado
	La tostadora no está encendida	Seleccione una función de tostado
	La palanca no está bajada	Baje la palanca hasta que encaje en su lugar
El pan no está lo suficientemente tostado	El nivel de tostado es demasiado bajo	Seleccione un nivel de tostado más alto
El pan está demasiado tostado	El nivel de tostado es demasiado alto	Seleccione un nivel de tostado más bajo
El pan no se tuesta de manera uniforme	El pan no está colocado correctamente en las ranuras	Asegúrese de que el pan está centrado en las ranuras
La tostadora humea	La bandeja migajera está llena	Vacíe la bandeja migajera
	El pan está demasiado cerca de los elementos calefactores	Asegúrese de que el pan está centrado en las ranuras
La tostadora no funciona correctamente	La tostadora está dañada	Devuelva la tostadora al centro de servicio autorizado más cercano para su inspección, ajuste mecánico o eléctrico o reparación

Garantía limitada de tres años

Este producto tiene una garantía de tres años contra defectos de materiales y mano de obra. Para obtener información completa sobre la garantía, visite www.oster.com.

Visite nuestra página web en www.oster.com

Français-1

IMPORTANTES MESURES DE SÉCURITÉ

Lors de l'utilisation d'appareils électriques, il faut toujours prendre des précautions élémentaires de sécurité, notamment les suivantes :

LIRE TOUTES LES INSTRUCTIONS AVANT L'UTILISATION

- Pour éviter tout risque de choc électrique, ne pas immerger le cordon, la fiche ou le grille-pain dans de l'eau ou tout autre liquide.
- Il est nécessaire de surveiller de près l'utilisation d'un appareil par un enfant ou à proximité d'un enfant.
- Débrancher l'appareil lorsqu'il n'est pas utilisé et avant le nettoyage. Laisser refroidir avant de mettre ou d'enlever des pièces et avant le nettoyage du grille-pain.
- Éviter de toucher les pièces mobiles.
- Ne pas faire fonctionner un appareil dont le cordon ou la fiche est endommagé ou après que l'appareil a mal fonctionné ou a été endommagé de quelque façon que ce soit. Retourner l'appareil au centre de service agréé le plus proche pour examen, réparation ou réglage électrique ou mécanique.
- L'utilisation d'accessoires non recommandés ou vendus par le fabricant de l'appareil peut causer un incendie, un choc électrique ou des blessures.
- Ne pas utiliser à l'extérieur ou à des fins commerciales.
- Ne pas laisser le cordon pendre du bord d'une table ou d'un comptoir ou toucher des surfaces chaudes.
- Ne pas placer sur ou près d'un brûleur à gaz ou électrique ou dans un four chauffé.
- Il faut faire très attention lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Pour débrancher, mettre la commande à n'importe quel réglage, puis retirer la fiche de la prise murale. Toujours saisir la fiche et la tirer pour la débrancher; ne jamais tirer sur le cordon.
- Ne pas utiliser l'appareil à d'autres fins que celles prévues.
- Ne pas utiliser de produits abrasifs forts pour nettoyer l'appareil. Ces produits risquent d'endommager la surface.
- Ne pas nettoyer avec des tampons à récurer métalliques. Des morceaux peuvent se détacher du tampon et entrer en contact avec des pièces électriques, ce qui présente un risque de choc électrique.
- Ne pas faire fonctionner le grille-pain si le cordon ou la fiche est endommagé, s'il ne fonctionne pas correctement, s'il a été échappé ou endommagé ou s'il a été laissé à l'extérieur ou échappé dans l'eau. Retourner le grille-pain au centre de service agréé le plus proche pour examen, réparation ou réglage électrique ou mécanique.
- Ne pas tenter de neutraliser les dispositifs de sécurité.
- Ne pas faire fonctionner le grille-pain sans le tiroir à miettes en place.
- Ne pas ranger de matériaux autres que les accessoires du grille-pain dans le grille-pain lorsqu'il n'est pas utilisé.
- Ne pas couvrir le grille-pain avec un matériau inflammable (p. ex., papier, tissu, sacs de plastique, rideaux, etc.) lorsqu'il est en marche.
- Ne pas utiliser le grille-pain pour chauffer une pièce.
- Ne pas utiliser le grille-pain à d'autres fins que pour griller du pain.
- Ne pas insérer de papier d'aluminium, de papier ou de plastique dans le grille-pain.
- Ne pas griller de bagels, de muffins anglais, de pâtisseries ou de pains épais.
- Ne pas utiliser le grille-pain si le pain est trop épais.
- Ne pas utiliser le grille-pain si le pain est congelé.
- Ne pas utiliser le grille-pain si le pain est trop gros.
- Ne pas utiliser le grille-pain si le pain contient des attaches métalliques.
- Ne pas utiliser le grille-pain si le pain contient des garnitures à haute teneur en sucre comme de la confiture, du miel, de la mélasse, du sucre, des édulcorants artificiels, des fruits, des légumes, de la viande, du poisson, de la volaille, des fruits de mer, des noix, des graines, des épices ou des herbes.
- Ne pas utiliser le grille-pain si le pain contient des garnitures à haute teneur en matières grasses comme du beurre, de la margarine, du fromage, des œufs ou des garnitures à haute teneur en protéines.
- Ne pas utiliser le grille-pain si le pain contient de la cannelle et du sucre.
- Ne pas utiliser le grille-pain si le pain contient du miel.
- Ne pas utiliser le grille-pain si le pain contient du chocolat.
- Ne pas utiliser le grille-pain si le pain contient du beurre de cacahuète.
- Ne pas utiliser le grille-pain si le pain contient de la confiture.
- Ne pas utiliser le grille-pain si le pain contient du sirop d'érable.
- Ne pas utiliser le grille-pain si le pain contient de la mélasse.
- Ne pas utiliser le grille-pain si le pain contient du sucre.
- Ne pas utiliser le grille-pain si le pain contient un édulcorant artificiel.
- Ne pas utiliser le grille-pain si le pain contient des fruits.
- Ne pas utiliser le grille-pain si le pain contient des légumes.
- Ne pas utiliser le grille-pain si le pain contient de la viande.
- Ne pas utiliser le grille-pain si le pain contient du poisson.
- Ne pas utiliser le grille-pain si le pain contient de la volaille.
- Ne pas utiliser le grille-pain si le pain contient des fruits de mer.
- Ne pas utiliser le grille-pain si le pain contient des noix.
- Ne pas utiliser le grille-pain si le pain contient des graines.
- Ne pas utiliser le grille-pain si le pain contient des épices.
- Ne pas utiliser le grille-pain si le pain contient des herbes.
- Ne pas utiliser le grille-pain si le pain contient des légumes.
- Ne pas utiliser le grille-pain si le pain contient de la viande.
- Ne pas utiliser le grille-pain si le pain contient du poisson.
- Ne pas utiliser le grille-pain si le pain contient de la volaille.
- Ne pas utiliser le grille-pain si le pain contient des fruits de mer.
- Ne pas utiliser le grille-pain si le pain contient des noix.
- Ne pas utiliser le grille-pain si le pain contient des graines.
- Ne pas utiliser le grille-pain si le pain contient des épices.
- Ne pas utiliser le grille-pain si le pain contient des herbes.

CONSERVEZ CES INSTRUCTIONS

Caractéristiques et avantages

Veuillez lire attentivement avant la première utilisation.

- Grille le pain à la couleur désirée
- Bouton Décongeler
- Bouton Bagel
- Bouton Réchauffer
- Bouton Annuler
- Fentes extra-larges
- Levier
- Tiroir à miettes amovible
- Rangement pour le cordon
- Boîtier froid au toucher
- Pieds antidérapants

Avant la première utilisation

Retirer tout matériel d'emballage et étiquettes promotionnelles du grille-pain. Nettoyer l'intérieur avec un chiffon humide et l'extérieur avec un chiffon doux et humide. Bien sécher.

Utilisation du grille-pain

1. S'assurer que le grille-pain est débranché et froid.
2. Retirer le tiroir à miettes en le tirant par le bas du grille-pain.
3. Vider les miettes dans l'évier ou la poubelle.
4. Remettre le tiroir à miettes en place.
5. Placer le pain dans les fentes. Les fentes sont extra-larges pour accueillir les bagels, les pains épais et les pâtisseries.
6. Sélectionner la fonction de grillage désirée.
7. Sélectionner le niveau de grillage désiré. Le niveau de grillage augmente de 1 à 7.
8. Abaisser le levier jusqu'à ce qu'il se verrouille en position basse. Le grille-pain commence à griller.
9. Pour annuler le cycle de grillage à tout moment, appuyer sur le bouton Annuler.
10. Lorsque le grillage est terminé, le grille-pain s'éteint automatiquement. Relever le levier pour retirer le pain.

Grillage de pains congelés

1. Sélectionner la fonction Congelé.
2. Sélectionner le niveau de grillage désiré.
3. Placer le pain congelé dans la fente.
4. Abaisser le levier jusqu'à ce qu'il se verrouille en position basse. Le grille-pain commence à griller.
5. Lorsque le grillage est terminé, le grille-pain s'éteint automatiquement. Relever le levier pour retirer le pain.

Grillage de bagels

1. Sélectionner la fonction Bagel.
2. Sélectionner le niveau de grillage désiré.
3. Placer le bagel dans la fente.
4. Abaisser le levier jusqu'à ce qu'il se verrouille en position basse. Le grille-pain commence à griller.
5. Lorsque le grillage est terminé, le grille-pain s'éteint automatiquement. Relever le levier pour retirer le bagel.

Réchauffage de pain grillé

1. Sélectionner la fonction Réchauffer.
2. Sélectionner le niveau de grillage désiré.
3. Placer le pain grillé dans la fente.
4. Abaisser le levier jusqu'à ce qu'il se verrouille en position basse. Le grille-pain commence à griller.
5. Lorsque le grillage est terminé, le grille-pain s'éteint automatiquement. Relever le levier pour retirer le pain.

Décongélation de pain congelé

1. Sélectionner la fonction Décongeler.
2. Sélectionner le niveau de grillage désiré.
3. Placer le pain dans la fente.
4. Abaisser le levier jusqu'à ce qu'il se verrouille en position basse. Le grille-pain commence à griller.
5. Lorsque le grillage est terminé, le grille-pain s'éteint automatiquement. Relever le levier pour retirer le pain.

Annulation de la fonction de grillage

Pour annuler le grillage à tout moment, appuyer sur le bouton Annuler. Le grille-pain s'éteint et le levier se libère.

Nettoyage du grille-pain

1. S'assurer que le grille-pain est débranché et froid.
2. Retirer le tiroir à miettes et vider les miettes dans l'évier ou la poubelle.
3. Nettoyer l'extérieur avec un chiffon humide.
4. Bien sécher.

Nettoyage du tiroir à miettes

1. Retirer le tiroir à miettes du grille-pain.
2. Vider les miettes dans l'évier ou la poubelle.
3. Laver le tiroir à miettes à l'eau chaude savonneuse.
4. Bien sécher.
5. Remettre le tiroir à miettes en place dans le grille-pain.

Nettoyage du boîtier extérieur

1. S'assurer que le grille-pain est débranché et froid.
2. Nettoyer l'extérieur avec un chiffon humide.
3. Bien sécher.

Nettoyage du cordon

1. S'assurer que le grille-pain est débranché et froid.
2. Nettoyer le cordon avec un chiffon humide.
3. Bien sécher.

Rangement du grille-pain

1. S'assurer que le grille-pain est débranché et froid.
2. Enrouler le cordon autour du compartiment de rangement situé au bas du grille-pain.
3. Ranger le grille-pain dans un endroit frais et sec.

Dépannage

Problème	Cause possible	Solution
Le grille-pain ne fonctionne pas	Le grille-pain n'est pas branché	Brancher le grille-pain dans une prise de courant en bon état
	Le grille-pain n'est pas allumé	Sélectionner une fonction de grillage
	Le levier n'est pas verrouillé en position basse	Abaisser le levier jusqu'à ce qu'il se verrouille en position basse
Le pain n'est pas assez grillé	Le réglage de grillage est trop bas	Sélectionner un réglage de grillage plus élevé
Le pain est trop grillé	Le réglage de grillage est trop élevé	Sélectionner un réglage de grillage plus bas
Le pain ne grille pas uniformément	Le pain n'est pas correctement placé dans les fentes	S'assurer que le pain est centré dans les fentes
Le grille-pain fume	Le tiroir à miettes est plein	Vider le tiroir à miettes
	Le pain est trop près des éléments chauffants	S'assurer que le pain est centré dans les fentes
Le grille-pain ne fonctionne pas correctement	Le grille-pain est endommagé	Retourner le grille-pain au centre de service agréé le plus proche pour examen, réparation ou réglage électrique ou mécanique

Garantie limitée de trois ans

Ce produit est garanti contre les défauts de matériaux et de fabrication pendant trois ans. Pour obtenir des renseignements complets sur la garantie, veuillez visiter le site www.oster.com.

Visitez notre site à www.oster.com

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Warnings

The product is intended to assist in safe driving and to allow the driver to have a broader rear view while the vehicle is in reverse. You, as the driver, are solely responsible for the safe operation of your vehicle and the safety of your passengers according to local traffic regulations. Do not use any features of this system to the extent it distracts you from safe driving. Your first priority while driving should always be the safe operation of your vehicle. Audiovox Electronics Corporation cannot accept any responsibility whatsoever for accidents resulting from failure to observe these precautions or safety instructions.

1. This product utilizes high voltage. Any unauthorized modifications or damage to the product may result in electrical shock. Handle all components with care. Inspect regularly for damage to components and cabling.
2. You are responsible for ensuring that the installation of this product does not void or affect the vehicle manufacturer's warranty. Audiovox Electronics Corporation or its subsidiaries are not liable in full or in part for improper installation resulting in loss or damage to your property, or for voiding all or part of the vehicle manufacturer's warranty.
3. Do not apply excessive force to any of the components contained within this kit. Excessive force used before, during or after installation that results in a damaged or non-functional part will void all warranties.
4. Please follow the procedures in this installation manual. Improper installation or modification of this product will void all warranties.

Downloaded from www.Manualslib.com manuals search engine

5998-7941_QS_MSM720_2015-06-05.fm Page 4 Wednesday, June 10, 2015 2:01 PM

Horizontal surface installation

Attach the supplied rubber feet to the four corners on the bottom of the controller within the embossed angled lines. Place the controller on a table or other sturdy horizontal surface in an uncluttered area. Secure the networking cables and power cord to a table leg or other part of the surface structure.

LEDs

Status LEDs

LED	State	Meaning
Power (green)	On	The controller is powered on.
	Off	The controller is not receiving power.
Fault (orange)	On	The controller is beginning its boot sequence. On for three seconds at power up or reset.
Locator (blue)	On	The `services <slot-id> locator on` command was issued to assist in finding the module.
	Flashing	The `services <slot-id> locator blink` command was issued to assist in finding the module.
	Off	Oefault state. Otherwise, the `services <slot-id> locator off` command was issued or a previous flash request has timed out.
Test (green)	Flashing	The SSO is active.
	Off	The SSO is not active.

Port LEDs

The SFP slots are shared with 10/100/1000 Base-T RJ-45 ports. When an SFP transceiver is installed in a slot, the associated RJ-45 port is disabled and cannot be used.

LED	State	Meaning
RJ-45 ports		
Link (green)	On	The port is enabled and linked to the connected device.
	Off	One of these condition exists: • No active network cable is connected to the port • The port is not receiving a link indication or sufficient light • The port has been disabled through the controller console, the web browser interface, HP Manager, or other network management tool
Mode (green)		Indicates Activity, Ouplex, or Speed according to Mode selected.
SFP ports		
Link (green)	Flashing	• The software does not support the SFP transceiver • The controller does not support this SFP transceiver For a list of supported SFPs see the *MSM720 Controllers Installation Guide*.
Link and Mode (green)	On for 2 seconds	Both Link and Mode turn on for two seconds and then go into operational state to indicate that the controller recognizes the SFP transceiver.

Downloaded from www.Manualslib.com manuals search engine

Step 4

Plug the power cord into an electrical outlet. You may optionally have an electrician wire the air purifier to your HVAC unit so that the air purifier only operates when your HVAC fan is running. Once the unit is plugged in the indicator light should glow to indicate the AHPCO Cell is working properly.

AHPCO™ Cell Replacement

Step 1

CAUTION: Before attempting to service the Air Oasis unit, be sure the power is off and unplugged.

Remove three (3) screws at the top of the aluminum face plate. Then slide the face plate up and off.

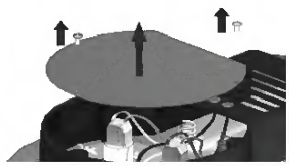

Step 2

Unplug the four pin lamp connectors and fiber optic cords from the AHPCO Cell.

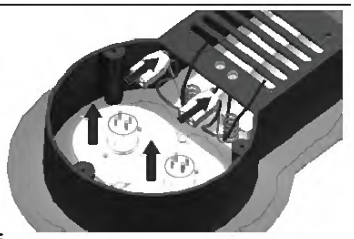

Read all instructions carefully before operating your air purifier.

Table of Contents

Safety Instructions and Cautions	1
Table of Contents	2
Warranty	3
Maintenance and Customer Service	4
Placement and Operation	4
Cleaning	4
AHPCO™ Cell Replacement	5-6
Troubleshooting Guide	7

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

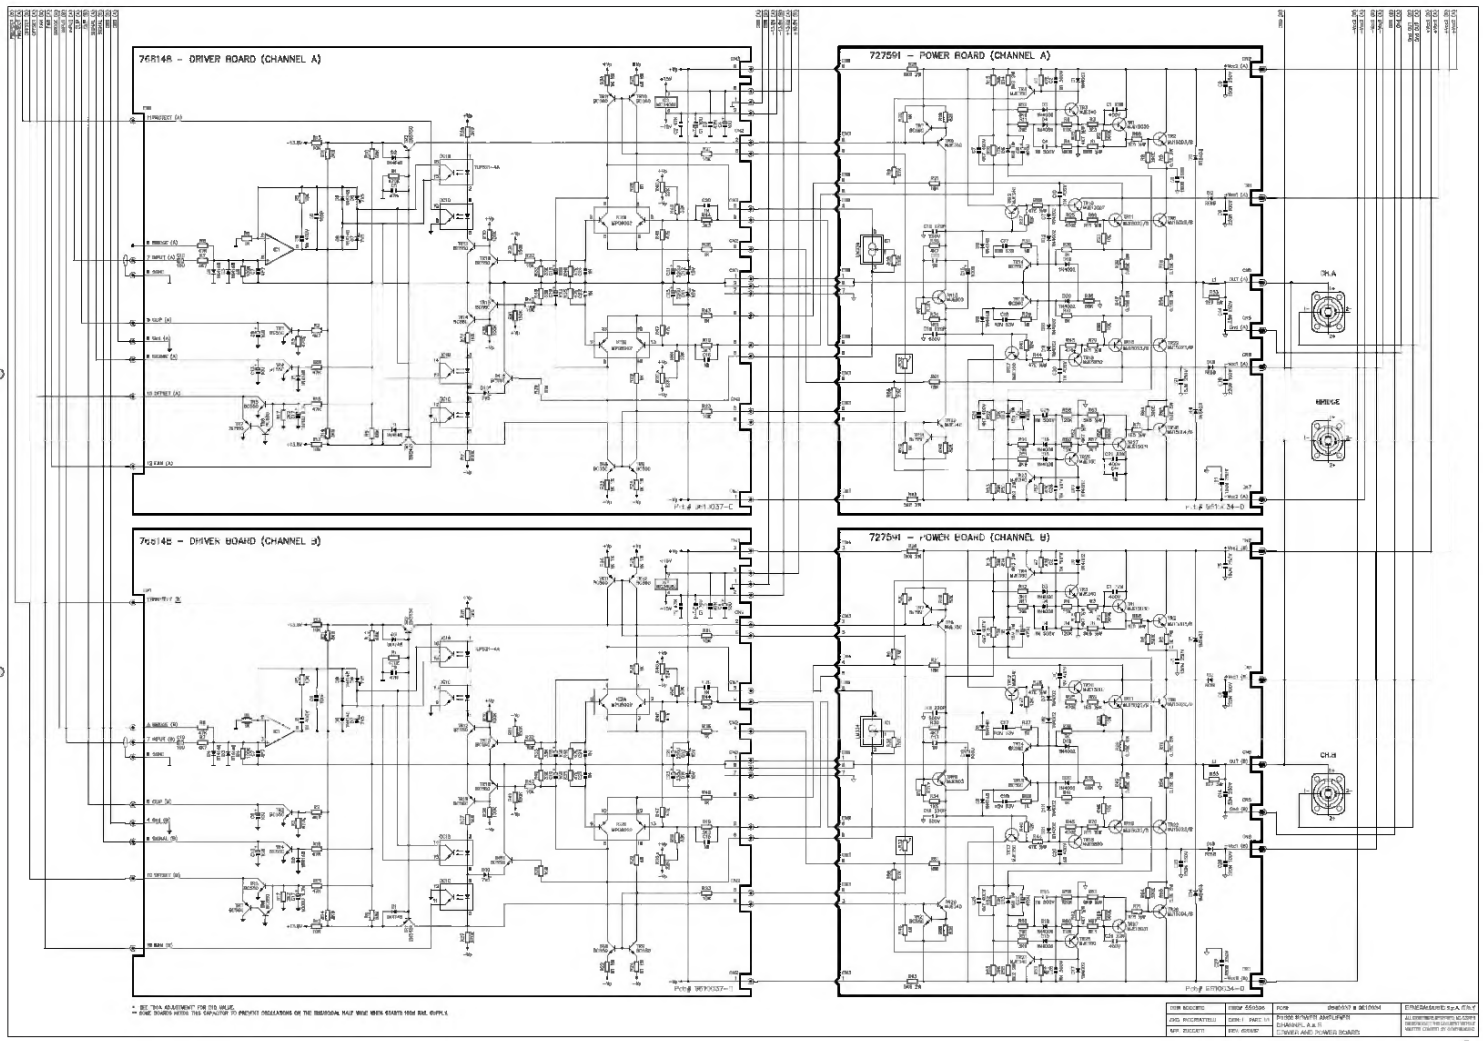
766148 - DRIVER BOARD (CHANNEL A)
727591 - POWER BOARD (CHANNEL A)
766148 - DRIVER BOARD (CHANNEL B)
727594 - POWER BOARD (CHANNEL B)
CH.A
CH.B

Downloaded from www.Manualslib.com manuals search engine

7. Enter a destination

NOTE: There is no need to enter a starting point. CoPilot uses GPS positioning to determine your location automatically.

In the Guidance screen, click **Destination** to enter an address. Then click **Address** to enter a city name and state/country abbreviation or a postal code, and a street address.

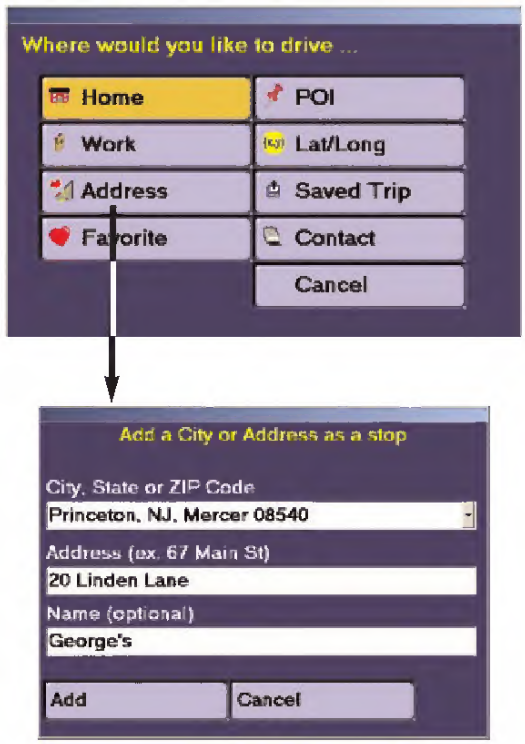

Enter a city name and state or country abbreviation separated by a comma and space (e.g. "**princeton, nj**" or "**paris, fr**" or "**sydney, nsw**"), then hit the **Enter** key on your keyboard . For more specific guidance you can also type a **street address**, with or without a building number (e.g. **158 nassau st**), and hit the **Enter** key.

TIP: Usually you will need to spell out words like "Saint", "Mount", "Fort", etc. Place names generally need to be spelled out: "**John F. Kennedy International Airport**" instead of "**JFK Airport**". If you have problems finding an address, try different ways of spelling words and/or place names.

Downloaded from www.Manualslib.com manuals search engine

1 First things first

Downloaded from www.Manualslib.com manuals search engine

producto defectuoso al distribuidor o proveedor de productos Grundfos donde lo haya adquirido, adjuntando con el mismo una prueba de compra, así como las fechas de instalación y avería y los datos relacionados con la instalación. A menos que se indique de otro modo, el distribuidor o proveedor se pondrán en contacto con Grundfos o con su centro de servicio autorizado para solicitar instrucciones. Cualquier producto defectuoso que deba ser devuelto a Grundfos o a su centro de servicio deberá enviarse a portes pagados, incluyendo la documentación relacionada con la reclamación o en garantía y/o una Autorización de devolución de material, si así se solicita.GRUNDFOS NO SE RESPONSABILIZARÁ DE AQUELLOS DAÑOS, PÉRDIDAS O GASTOS ACCIDENTALES O RESULTANTES QUE PUDIERAN DERIVARSE DE LA INSTALACIÓN O EL USO DE SUS PRODUCTOS, NI TAMPOCO DE CUALQUIERA OTRA CAUSA QUE EMANE DE LOS MISMOS. NO EXISTEN GARANTÍAS EXPRESAS O IMPLÍCITAS, INCLUIDAS AQUELLAS DE COMERCIABILIDAD O IDONEIDAD PARA UN FIN DETERMINADO, QUE AMPLÍEN LAS GARANTÍAS QUE SE DESCRIBEN O A LAS QUE SE HACE REFERENCIA EN EL PÁRRAFO ANTERIOR.Ciertas jurisdicciones no admiten la exclusión o limitación de los daños accidentales o resultantes; otras rechazan la imposición de limitaciones en cuanto a la duración de las garantías implícitas. Es posible, por tanto, que las limitaciones o exclusiones anteriores no se sean de aplicación. Esta garantía le confiere derechos legales específicos. Puede que disponga de otros derechos en virtud de su jurisdicción.

Garantie limitée

Garantie limitéeLes produits fabriqués par GRUNDFOS PUMPS CORPORATION (Grundfos) sont garantis, uniquement pour l'utilisateur initial, exempts de défauts de matériaux et de fabrication pour une période de 24 mois à compter de la date d'installation, mais au plus 30 mois à compter de la date de fabrication. Dans le cadre de cette garantie, la responsabilité de Grundfos se limite à la réparation ou au remplacement, à la convenance de Grundfos, sans frais, FOB par l'usine Grundfos ou un atelier de maintenance autorisé, de tout produit de fabrication Grundfos. Grundfos n'assume aucune responsabilité quant aux frais de dépose, d'installation, de transport ou pour toute autre charge pouvant survenir ou relative à une réclamation au titre de la garantie. Les produits vendus mais non fabriqués par Grundfos sont couverts par la garantie fournie par le fabricant desdits produits et non par la garantie de Grundfos. Grundfos n'est responsable ni des dommages ni de l'usure des produits causés par des conditions d'exploitation anormales, un accident, un abus, une mauvaise utilisation, une altération ou une réparation sur un autre site ou encore par une installation du produit non conforme aux fiches d'installation et de fonctionnement imprimées de Grundfos.Pour bénéficier de la garantie, il faut renvoyer le produit défectueux au distributeur ou à un revendeur de produits Grundfos chez qui il a été acheté, accompagné de la preuve d'achat, de la date d'installation, de la date du dysfonctionnement ainsi que des données concernant l'installation. Sauf disposition contraire, le distributeur ou le revendeur contactera Grundfos ou un atelier de maintenance autorisé pour obtenir des instructions. Tout produit défectueux renvoyé à Grundfos ou à un atelier de maintenance doit être expédié port payé ; la documentation relative à la déclaration de demande de garantie et à une autorisation de retour du matériel éventuelle doit être jointe, si elle est demandée.GRUNDFOS N'ASSUME AUCUNE RESPONSABILITÉ EN CAS DE DOMMAGES INDIRECTS OU CONSÉCUTIFS, DE PERTES OU DE DÉPENSES RÉSULTANT DE L'INSTALLATION, DE L'UTILISATION OU DE TOUTE AUTRE CAUSE. IL N'EXISTE AUCUNE GARANTIE, EXPLICITE NI IMPLICITE, Y COMPRIS LA QUALITÉ MARCHANDE OU L'ADÉQUATION POUR UN USAGE PARTICULIER, EN DEHORS DES GARANTIES DÉCRITES OU MENTIONNÉES CIDESSUS.Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages indirects ou consécutifs, et certaines juridictions ne permettent pas de limiter la durée des garanties implicites. Il se peut donc que les limitations ou les exclusions mentionnées ci-dessus ne soient pas applicables dans votre cas. Cette garantie vous donne des droits légaux spécifiques. Il se

GRUNDFOS Kansas City
17100 West 118th Terrace
Olathe, Kansas 66061
Phone: (913) 227-3400
Fax: (913) 227-3500
www.grundfos.us

GRUNDFOS Canada
2941 Brighton Road
Oakville, Ontario L6H 6C9 Canada
Phone: +1-905 829 9533
Telefax: +1-905 829 9512
www.grundfos.ca

GRUNDFOS Mexico
Boulevard TLC No. 15
Parque Industrial Stiva Aeropuerto
C.P. 66600 Apodaca, N.L. Mexico
Phone: 011-52-81-8144 4000
Fax: 011-52-81-8144 4010
www.grundfos.mx

Addresses revised 13.08.2013

Downloaded from www.Manualslib.com manuals search engine

INSTALLATION

After unpacking the QDFR, inspect it for damage. If damage has occurred, file a claim with the carrier then contact ADTRAN Customer Service. Refer to "Appendix C, Warranty" for further information. If possible, keep the original shipping container for returning the QDFR for repair or for verification of shipping damage.

SHIPPING CONTENTS

The contents include the following items:

- QDFR Unit
- *Quad Fiber Remote (QDFR) Unit Job Aid* (P/N 61181307L7-22)

CAUTION

Electronic modules can be damaged by ESD. When handling modules, wear an antistatic discharge wrist strap to prevent damage to electronic components. Place modules in antistatic packing material when transporting or storing. When working on modules, always place them on an approved antistatic mat that is electrically grounded.

Installing the QDFR

To install the QDFR, perform the following steps:

1. Place the unit in a location where a DC power source is available. This unit operates within a voltage range of –24 VDC to –48 VDC.
2. Using the hex nut and lock washer supplied with the QDFR, attach a grounding strap to the grounding lug on the left side of the QDFR chassis. Finger-tighten only.
3. Conned power to the QDFR by connecting the plus (+), minus (–), and ground wires to a three-position terminal block located at the left of the backplane (Figure 2). The DS1 loop connections are made through four RJ-48C type connectors. Single-mode fiber is connected to the SC-type connector located at the right of the backplane.

When the QDFR first powers up, the unit initializes a self test that lasts for approximately 30 seconds. After the self test is completed, the LEDs reflect the current status of the unit.

Front Panel LEDs

The QDFR provides front panel LEDs to display status information for the unit. Table 2 lists the front panel LEDs and their indications.

CE This appliance complies with the following EC Directives :

- 73/23EEC of 19.02.1973 - Low-Voltage Directive.
- 89/336/EEC of 03.05.1989 (including Amendment Directive 92/31/EEC) - EMC Directive.

AEG Hausgeräte AG
Postfach 1036
D-90327 Nürnberg 1

© Copyright by AEG

H 271 277 800 - 0795/03 - 159

AEG Domestic Appliances Ltd
Customer Care Department
PO Box 47, Newbury
Berkshire, RG14 5XL
Telephone: 01635 572700
Fax: 01635 42970

Downloaded from www.Manualslib.com manuals search engine

- OSD-Funktionsliste

(Durch Symbol)	(Durch ◀▶ Auswahl)
Anzeige	Anzeigemodus: Wählen Sie Ihren bevorzugten Modus aus Hell, Standard oder Öko.
	Helligkeit: Hier stellen Sie die Bildhelligkeit ein.
	Kontrast: Hier stellen Sie den Bildkontrast ein.
	Projektionsmodus: Wählen Sie Front oder Rück.
	Seitenverhältnis: Wählen Sie Ihr gewünschtes Seitenverhältnis.
Trapezkorrektur	Hier korrigieren Sie Bildverzerrungen, die durch Kippen des Projektors entstehen.
Lautstärke	Passen Sie die Kopfhörerlautstärke an.
Informationen	Blendet die Projektorinformationen für diesen Projektor ein.
Sprache	Wählen Sie Ihre bevorzugte Menüsprache.
Einstellungen	Zurücksetzen: Wählen Sie „Ja", um die Parameter in allen Menüs auf die werkseitigen Standardwerte zurückzusetzen
Hinweis 1: Funktionen variieren je nach Modelldefinition. **Hinweis 2:** Die Klangqualität des USB-Lautsprechers wird nicht garantiert.	

Informationen zu Sicherheit und Komfort

Lesen Sie sorgfältig diese Anweisungen. Heben Sie das Dokument für einen späteren Gebrauch auf. Befolgen Sie alle auf dem Produkt befindlichen Warnungen und Anweisungen.

Auf die Stromversorgung achten

Die Stromversorgung des Gerätes muss mit der Angabe auf dem Typenschild übereinstimmen. Sind Sie sich hinsichtlich der Spezifikationen Ihres Stromnetzes unsicher, dann nehmen Sie bitte mit Ihrem Händler oder Stromanbieter Kontakt auf.

Instandsetzen des Produkts

Versuchen Sie niemals das Produkt in eigener Regie zu reparieren. Durch Öffnen des Gehäuses setzen Sie sich Hochspannung und anderen Gefahren aus. Überlassen Sie die Reparatur qualifiziertem Kundendienstpersonal.

Weitere Sicherheitshinweise

- Blicken Sie niemals direkt in das Objektiv des Projektors, wenn die Lampe eingeschaltet ist. Das helle Licht kann Ihren Augen schaden.
- Verwenden Sie das Gerät nicht in folgenden Umgebungen:
  - Eine Stelle, wo es eine hohe Feuchtigkeit, übermäßig Staub oder Zigarettenrauch gibt. Dies kann die optischen Komponenten verschmutzen, die Standzeit des Gerätes verkürzen und das Bild verdunkeln.
  - Eine Stelle, deren Umgebungstemperatur über 40 °C/104 °F beträgt.
- Trennen Sie unverzüglich den Projektor vom Netz, wenn irgendetwas mit ihm nicht stimmt. Betreiben Sie das Gerät nicht, wenn der Projektor Rauch, komische Geräusche oder Geruch abgibt. Ein Brand oder elektrischer Schlag kann die Folge sein. Trennen Sie in diesem Fall unverzüglich den Projektor vom Netz und nehmen Kontakt mit Ihrem Händler auf.
- Richten Sie das Projektorobjektiv nicht auf die Sonne. Ein Brand kann die Folge sein.
- Blicken Sie nicht während des Betriebs des Projektors in das Luftaustrittsgitter. Dies kann Ihren Augen schaden.

Anweisungen zur Entsorgung

Entsorgen Sie das elektronische Gerät nicht mit dem Hausmüll zusammen. Bitte recyceln Sie das Gerät, um die Umweltbelastung zu minimieren und die Umwelt zu schützen. Für weitere Informationen zu den Regelungen über Elektro- und Elektronik-Altgeräte (WEEE) besuchen Sie bitte http://www.acer-group.com/public/Sustainability/sustainability01.htm

Der Projektor kann nicht seitlich aufgestellt oder an der Decken montiert verwendet werden.

Bestimmungen und Sicherheitshinweise

FCC-Erklärung

Dieses Gerät wurde geprüft und hat sich als mit den Grenzwerten für ein Digitalgerät der Klasse B gemäß Teil 15 der Bestimmungen der amerikanischen Bundesbehörde für das Fernmeldewesen FCC (Federal Communications Commission) konform erwiesen. Diese Grenzwerte geben einen angemessenen Schutz gegen schädliche Funkstörungen innerhalb von Wohngebäuden. Dieses Gerät erzeugt und verwendet Funkfrequenzenergie, die ausgestrahlt werden kann und bei unsachgemäßer, nicht der Anleitung des Herstellers entsprechender Installation und Verwendung schädliche Störungen des Rundfunkempfangs verursachen kann.

Es gibt jedoch keine Garantie, dass bei einer bestimmten Installation keine Störungen auftreten. Kommt es durch das Gerät zu Störungen im Radio- oder Fernsehempfang, was sich durch Ein- und Ausschalten des Geräts überprüfen lässt, sollte der Benutzer versuchen, die Störung durch eine oder mehrere der folgenden Maßnahmen zu beheben:

- Richten Sie Ihre Empfangsantenne neu aus, oder stellen Sie sie an einem anderen Ort auf.
- Vergrößern Sie den Abstand zwischen dem Gerät und dem Empfänger.
- Schließen Sie das Gerät an eine Steckdose an, die nicht von demselben Stromkreis wie die Steckdose des Empfängers versorgt wird.
- Wenden Sie sich an den Händler oder einen erfahrenen Radio-/Fernsehtechniker.

Hinweis: Abgeschirmte Kabel

Um weiterhin die Anforderungen der FCC-Bestimmungen zu erfüllen, müssen abgeschirmte Kabel bei allen Verbindungen mit anderen Computergeräten verwendet werden.

Hinweis: Peripheriegeräte

Nur die Peripheriegeräte (Ein-/Ausgabegeräte, Endgeräte, Drucker etc.), die für die Konformität mit den Klasse B-Grenzwerten zertifiziert wurden, dürfen mit diesem Gerät verbunden werden. Der Betrieb mit nicht zertifizierten Peripheriegeräten kann Störungen im Radio- oder Fernsehempfang verursachen.

Achtung

Durch Änderungen oder Modifikationen, die nicht ausdrücklich von dem Hersteller genehmigt wurden, kann die von der Federal Communications Commission erteilte Gerätebetriebsbefugnis des Benutzers ungültig werden.

Betriebsbedingungen

Dieses Gerät erfüllt alle Anforderungen des Teils 15 der FCC-Bestimmungen. Der Betrieb unterliegt den folgenden zwei Bedingungen: (1) Das Gerät darf keine schädlichen Störungen verursachen. (2) Das Gerät muss störfest gegen aufgenommene Störungen sein. Das betrifft auch solche Störungen, die unerwünschte Betriebszustände verursachen könnten.

Hinweis: Für Benutzer in Kanada

Dieses Digitalgerät der Klasse B erfüllt alle Anforderungen der kanadischen Bestimmungen ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numérique de la classe B est conforme a la norme NMB-003 du Canada.

CE-Konformitätserklärung

Hiermit erklären wir, dass das obige Produkt mit den grundlegenden Anforderungen und anderen relevanten Abschnitten der EMV-Richtlinie 2014/30/EU, der Niederspannungsrichtlinie 2014/35/EU, der RoHS-Richtlinie 2011/65/EU und der Richtlinie 2009/125/EG zur Schaffung eines Rahmens für die umweltgerechte Gestaltung energieverbrauchsrelevanter Produkte übereinstimmt.

Downloaded from www.Manualslib.com manuals search engine

Getting Help

If you have a problem and have exhausted the information in this guide, you can get further information and other help in the following locations.

Compaq Technical Support

In North America, call the Compaq Technical Phone Support Center at 1-800-OK-COMPAQ[1]. This service is available 24 hours a day, 7 days a week.

Outside North America, call the nearest Compaq Technical Support Phone Center. Telephone numbers for worldwide Technical Support Centers are listed on the Compaq website. Access the Compaq website by logging on to the Internet:

http://www.compaq.com

Be sure to have the following information available before you call Compaq:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Add-on boards or hardware
- Third-party hardware or software
- Operating system type and revision level
- Detailed, specific questions

Compaq Website

The Compaq website has information on this product as well as the latest drivers and Flash ROM images. You can access the Compaq website by logging on to the Internet:

http://www.compaq.com

[1] For continuous quality improvement, calls may be recorded or monitored.

Downloaded from www.Manualslib.com manuals search engine

1.2 O que é a televisão digital?

A Televisão digital oferece uma gama maior de visualização de TV, ausência das interferências encontradas na TV analógica. Ela promete transformar a visualização de TV numa nova experiência. Existe uma maior selecção de programação em ecrã panorâmico. Muitos dos seus programas favoritos são em ecrã panorâmico nos canais digitais - algo que a TV analógico não pode fazer correctamente.

Existe uma nova experiência de interactividade na TV digital. Utilizando o comando remoto, pode aceder a todos os tipos de informação, como o texto digital, que é muito mais claro do que o sistema antigo de teletexto. A TV digital proporciona-lhe um maior divertimento das informações relacionadas com o programa que está a visualizar. Também pode aceder a um Guia Electrónico de Programas que lhe dá uma maneira rápida e fácil para visualizar ma lista completa de programas digitais, tal como tem num jornal ou uma revista de TV.

1.3 Canais digitais ou analógicos?

Quando a televisão é ligada pela primeira vez, fica sempre no modo **DIGITAL.**

Utilize a tecla (A/D) o comando remoto para alternar a TV entre o modo analógico e digital. Utilize **P + / –** ou (0) a (9) para seleccionar os canais.

Nota

- Os capítulos 6 a 20 contêm toda a informação que precisa para funcionar com a sua TV no modo Digital. Os capítulos 21 a 30 contêm toda a informação e as instruções que precisa para funcionar com a sua TV no modo Analógico.

Removing the Y Brace and Card Bracket

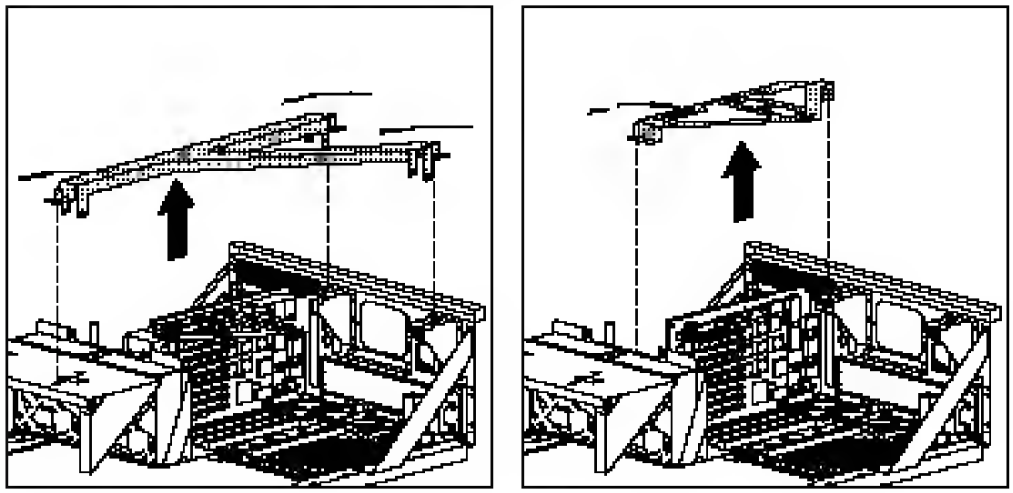

Figure 2-2. Removing the Y Brace and Card Bracket

1. Unscrew the 1/4-turn release screws (3) on the Y brace and lift the brace out.
2. Unscrew the 1/4-turn release screw (1) on the card bracket and tilt the bracket up and then out.

Mass Storage Devices

The ProLiant 4500R Server has two areas for mass storage devices: the removable media area and Hot-Pluggable hard drive bays.

Removable Media Storage Devices

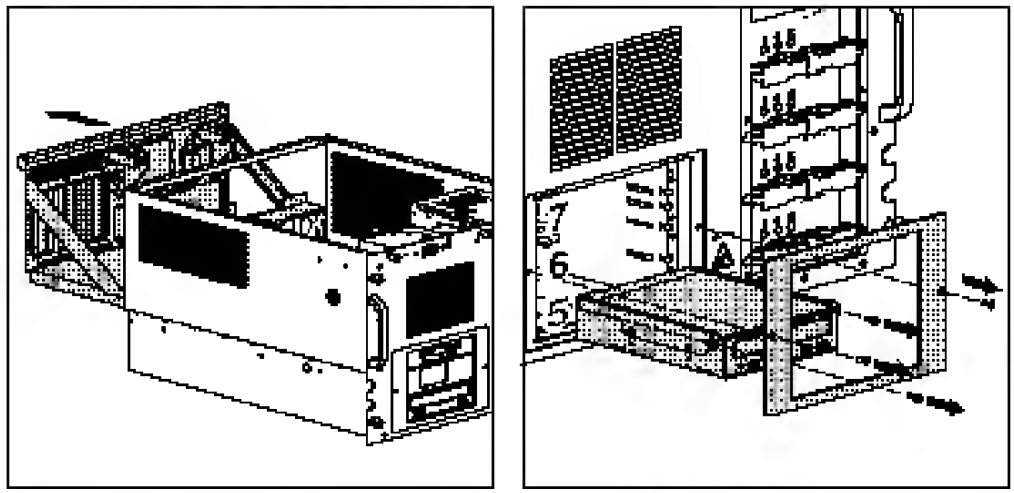

Figure 2-3. Removing a Storage Device from the Removable Media Area

1. Extend server out from the rack to the locked position and remove cover plate.
2. Remove Y brace and card bracket.

Downloaded from www.Manualslib.com manuals search engine

Page 4 Convergence & Moire Adjustment

This page is defined as horizontal convergence, vertical convergence and horizontal moire adjustment. The operation procedure are as follows:

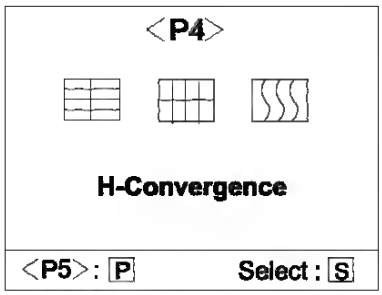

1. Press Ⓟ to locate the page.
2. Press ⓚ or ⓛ to locate the function icon.
3. Press Ⓢ to select the icon.
4. Press ⓚ or ⓛ to adjust the setting.
5. Press Ⓢ to save the setting.
6. Repeat the steps above to change other settings.

Function Icons

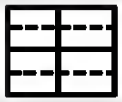
H-Convergence adjusts the difference between the light and dark areas.

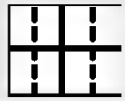
V-Convergence adjusts the vertical convergence.

H-Moire adjusts the horizontal moire.

Downloaded from www.Manualslib.com manuals search engine

The Alfano 6 App

The Alfano 6 app is available for free on Android and iOS under the name ALFANO6.

When you open your application, it automatically activates the Bluetooth, thank you to leave this function on to allow the exchange of information with your Alfano 6.

Home Page

On the home page you will find two icons:

Allows you to configure your application settings like:
Language
The unit of speed (kmh or mph)
The temperature unit (C or F)
The date format
Your Vehicle Type (Karting, Motorcycle, Car)

Redirect you to the manual of Alfano 6

The tabs on the lower part of the screen gives you access to several features that we will detail.

Analysis

By pressing the analysis button you enter the menu of the same name.

To download the data from your Alfano 6 press Download (top left).
This will start the pairing between your application and your Alfano 6. You can also select the number of sessions you want to download.

Once the data is retrieved you can, using the filter bar, navigate through all of your sessions and select the one you want to analyze.

Connecting the camera to your TV

Connect your camera and TV via an AV cable for real-time display. You can display your video clips, still pictures, and audio recordings directly on your TV screen to share them with your friends and family members.

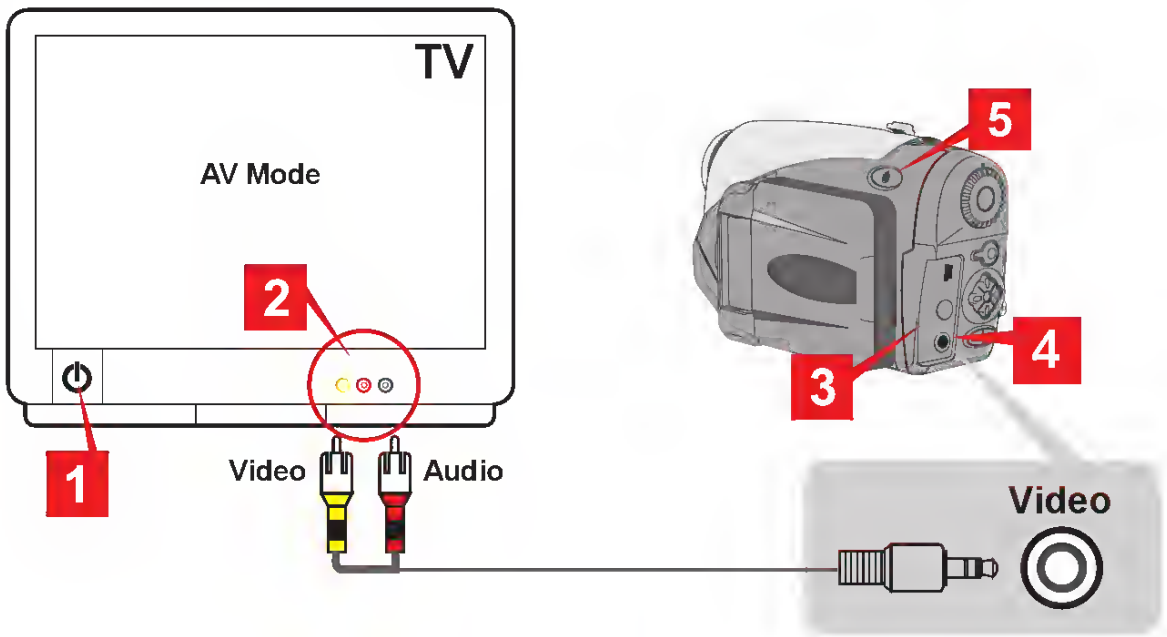

1. Turn on your TV and switch to AV mode.
2. Connect the audio and video ends of the AV cable to your TV.
3. Open the connector cover of your camera.
4. Connect the other end of the video cable to your camera.
5. Turn on the camera.

For more details on selecting the A/V options, please refer to page 29.

Downloaded from www.Manualslib.com manuals search engine

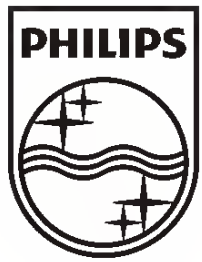

Specifications are subject to change without notice
"PHILIPS and the PHILIPS' Shield Emblem are registered trademarks of
Koninklijke Philips Electronics N.V. And are used under license from
Koninklijke Philips Electronics N.V."
www.philips.com

Downloaded from www.Manualslib.com manuals search engine

2. Touch and hold ☆ for more than three seconds.
   An acoustic signal sounds.
3. Deactivate the appliance.

Using My Favourite Programme function:

- **To activate the function** touch ☆ . The appliance activates your favourite programme.
- **To deactivate the function** touch ⏻ . The appliance deactivates your favourite programme.

When the function operates, you can change the time and temperature.

Child Lock

The Child Lock prevents an accidental operation of the appliance.

Activating and deactivating the Child Lock function:

1. Deactivate the appliance with ⏻ . Do not set an oven function.
2. Touch and hold ⏲ and ∨ at the same time for 2 seconds. An acoustic signal sounds.

SAFE comes on/goes out in the display.

If the oven has Pyro Cleaning function, the door is locked.
SAFE comes on in the display when you touch a sensor field.

Control lock

You can activate the function only when the appliance operates. The Control Lock prevents an accidental change of the oven function.

Activating/deactivating the control lock function:

1. Activate the appliance.
2. Activate an oven function or setting.
3. Touch and hold ⏲ and ∨ at the same time for 2 seconds. An acoustic signal sounds.

Loc comes on/goes out in the display.

You can deactivate the appliance when the control lock is on. When you deactivate the appliance, the control lock deactivates.
If the oven has the Pyro cleaning function, the door is locked.
Loc comes on in the display when you touch a sensor field.

Settings menu

The settings menu lets you to add or remove functions from the main menu (for example: you can set on or off the Residual heat indicator). Settings menu has maximum seven settings (from SET1 to SET7). The number of the settings is different for different models. Look into the table below to see the possible value of each setting.

Settings menu

Indicator of the setting menu	Description	Value to set
SET1	SET+GO	ON/OFF
SET2	RESIDUAL HEAT INDICATOR	ON/OFF

Downloaded from www.Manualslib.com manuals search engine

The **Profile Settings** box will appear allowing you to specify the settings for your new profile or change settings for your existing profile.

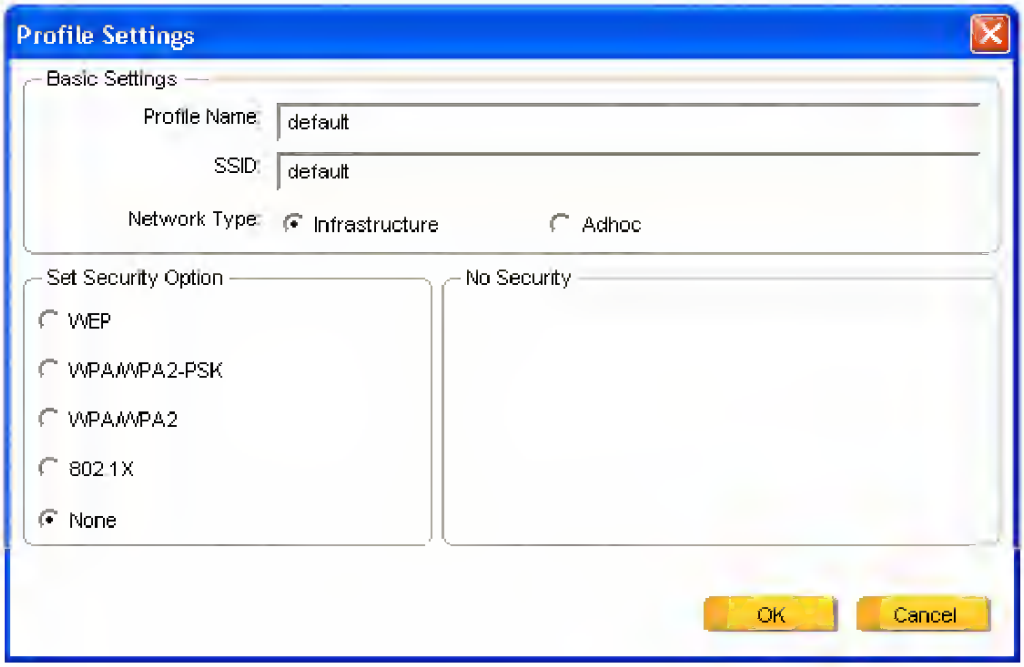

Once you are finished entering the settings, click **OK** to save the changes.

Downloaded from www.Manualslib.com manuals search engine

Online/activity LED (green)	Fault/UID LED (amber/blue)	Interpretation
On, off, or flashing	Alternating amber and blue	The drive has failed, or a predictive failure alert has been received for this drive; it also has been selected by a management application.
On, off, or flashing	Steadily blue	The drive is operating normally, and it has been selected by a management application.
On	Amber, flashing regularly (1 Hz)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
On	Off	The drive is online, but it is not active currently.
Flashing regularly (1 Hz)	Amber, flashing regularly (1 Hz)	**Do not remove the drive. Removing a drive may terminate the current operation and cause data loss.** The drive is part of an array that is undergoing capacity expansion or stripe migration, but a predictive failure alert has been received for this drive. To minimize the risk of data loss, do not replace the drive until the expansion or migration is complete.
Flashing regularly (1 Hz)	Off	**Do not remove the drive. Removing a drive may terminate the current operation and cause data loss.** The drive is rebuilding, erasing, or it is part of an array that is undergoing capacity expansion or stripe migration.
Flashing irregularly	Amber, flashing regularly (1 Hz)	The drive is active, but a predictive failure alert has been received for this drive. Replace the drive as soon as possible.
Flashing irregularly	Off	The drive is active, and it is operating normally.
Off	Steadily amber	A critical fault condition has been identified for this drive, and the controller has placed it offline. Replace the drive as soon as possible.
Off	Amber, flashing regularly (1 Hz)	A predictive failure alert has been received for this drive. Replace the drive as soon as possible.
Off	Off	The drive is offline, a spare, or not configured as part of an array.

Server updates with an HP Trusted Platform Module and BitLocker™ enabled

When a TPM is installed and enabled in RBSU, and when the Microsoft® Windows® BitLocker™ Drive Encryption feature is enabled, always disable BitLocker™ before performing any of the following procedures:

- Restarting the computer for maintenance without a PIN or startup key
- Updating firmware (on page 84)
- Upgrading critical early boot components
- Upgrading the system board to replace or remove the TPM
- Disabling or clearing the TPM
- Moving a BitLocker™-protected drive to another server
- Adding an optional PCI device, such as a storage controller or network adapter

Downloaded from www.Manualslib.com manuals search engine

Camera Function

Rear Camera Function:
The unit is "camera ready." Before accessing any camera features, you must install a rear video camera. When the camera is not installed and the function is accessed by the gear selector being placed in reverse or the unit's menu, touching the **Camera** icon produces no response. When the camera is installed, the rear view image of what is behind the vehicle will appear when the vehicle's gear selector lever is placed in reverse. When the lever is removed from the reverse position, the unit will return to the previous screen.

The rear camera image can be adjusted from the "Setup" menu under the "Video" submenu. The image can be changed from normal to mirror image.

Downloaded from www.Manualslib.com manuals search engine

When the motion detection function of the selected camera is enabled, you can configure the camera to start recording triggered by the motion detected. Click **SETTING > Motion Configuration**, and then select the **Recording** option to enable the selected camera to record by motion detection.

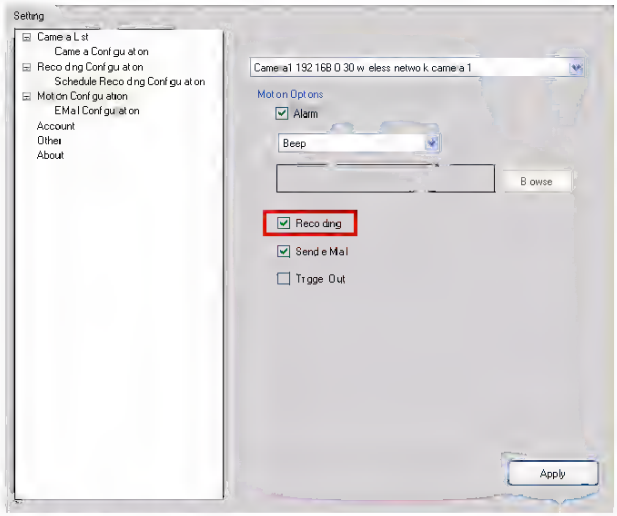

- **Schedule recording**

  This recording method will work after you have completed the required settings in **Schedule Recording Configuration**. The recording schedule can be defined by **Schedule Period** or **Recording Time**.

  - **Schedule Period:** First, select the camera from the pull-down list. Then, click **Add** to set the Start/Stop date and time and then click **OK** to add the recording schedule to the list. Click **Apply** to save the settings.

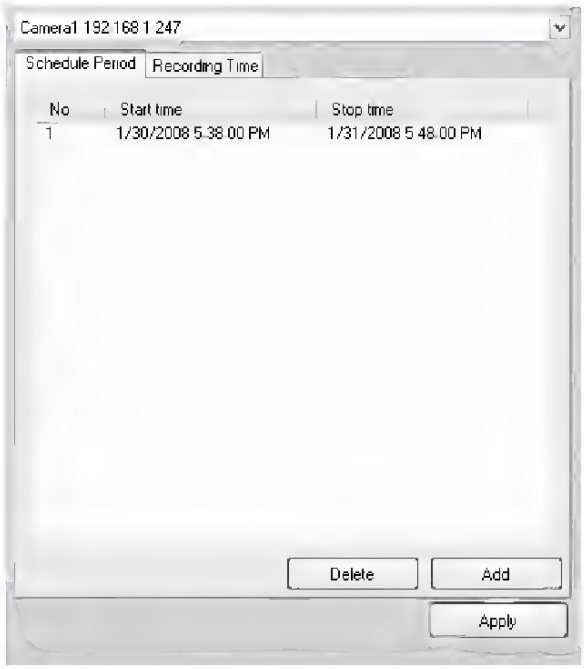

Downloaded from www.Manualslib.com manuals search engine

Technische Daten

Technische Daten	
Standards	WLAN HD 1.1, HDMI 1.4a, MHL V2.0
Frequenz	60 GHz
Eingang/Ausgang	HDMI/MHL -n (MWIT1), MHL Ausgang x 1 (MWIR1)
Antennentyp	24 Antennenanordnung
Bereich	10 Meter Nutzung innen
A/V-Anschluss	MWIT1: 1 Anschluss (CEC Passthrough) MWIR1: 1 Anschluss (CEC Passthrough)
Physikalische Daten	Gewicht: 106 g (MWIT1) 120 g (MWIR1) Abmessungen: 88,0 x 72,0 x 31,2 mm (MWIT1) 100,0 x 30,0 x 18,0 mm (MWIR1)
Netzteil	Eingang: AC 100 bis 240 V bei 50 / 60 Hz 0,3 A Ausgang: DC 5 V 2,0 A
LED-Anzeigen	Eine Netzanzeige.
Betriebsumgebung	Betriebstemperatur: 0 bis 40° C Lagertemperatur: -20 bis 70° C Betriebsluftfeuchtigkeit: 10% bis 90% (nicht kondensierend) Lagerluftfeuchtigkeit: 5% bis 90% (nicht kondensierend)
SRRC Nummer	MWIT1:
	MWIR1:

Downloaded from www.Manualslib.com manuals search engine

- HASH_AREA_SIZE – Memory area allocated for each process to do hash join work. The hash area does not cache blocks in the buffer cache. For DSS systems, this value may range from 8MB to 32MB. Larger tables require a larger HASH_AREA_SIZE. Setting the HASH_AREA_SIZE is system dependent and should be tuned over a period of time until an acceptable hash area size is identified.
- HASH_MULTIBLOCK_IO_COUNT – Determines the number of hash buckets for I/O transfer. For larger tables (greater than 100gig in size), this parameter should be increased. During our TPC-D test, HASH_MULTIBLOCK_IO_COUNT is set to 16.
- HASH_JOIN_ENABLED – Should be set to TRUE to allow for hash joins.
- SORT_AREA_SIZE – Specifies the maximum amount of PGA memory, which any Oracle thread can use for sorting.
- SORT_WRITE_BUFFERS – If SORT_DIRECT_WRITES is set to true, each user thread will have SORT_WRITE_BUFFERS * SORT_WRITE_BUFFER_SIZE * number of parallel query processes of memory allocated to it. These buffers are then used for sorting instead of the main buffer cache.
- ORDERED_NESTED_LOOP – Helps cost based optimizer to determine order of execution for each loop within a nested loop when ORDERED_NESTED_LOOP is set to TRUE.
- OPTIMIZER_MODE – Use CHOOSE or COST. Do not use RULE. The default value is CHOOSE.
- OPTIMIZER_PERCENT_PARALLEL – Specifies the amount of parallelism that the optimizer uses in its cost functions. The default of 0 means that the optimizer chooses the best serial plan. A value of 100 means that the optimizer uses each object's degree of parallelism in computing the cost of a full table scan operation. Low values favor indexes, and high values favor table scans. The recommended value is 100 divided by your number of concurrent users.
- PARALLEL_MIN_SERVERS – Specifies the minimum of parallel query processes for each instance. Oracle8 Server creates these processes at the instance startup.
- PARALLEL_MAX_SERVERS – Specifies the maximum of parallel query processes for each instance. As the number of SQL statements processed increases, Oracle8 Server will automatically create a new parallel process as needed. It will not exceed the value specified in PARALLEL_MAX_SERVERS.
- PARALLEL_SERVER_IDLE_TIME – The time which parallel servers will remain active. If parallel process has been idle for the period of time specified by PARALLEL_SERVER_IDLE_TIME, then Oracle8 Server will terminate that process. The number of parallel processes will never drop below the value of PARALLEL_MIN_SERVERS.

Please refer to *Oracle8 Server Tuning* for more information regarding Oracle parallel execution parameters.

Conclusion

Tuning a DSS system is a highly system dependent and reiterative job. One configuration may work well for one DSS system and poorly for another DSS system. When initially setting up and tuning your system, you may have to go through numerous trials before getting an acceptable level of performance. You will also want to evaluate the DSS performance after your system is set up and determine if any of the above tuning suggestions need to be reapplied. Don't worry – your users will usually inform you if this is necessary. Good luck!

© 1998 Compaq Computer Corporation, All Rights Reserved

Downloaded from www.Manualslib.com manuals search engine

Assembly process

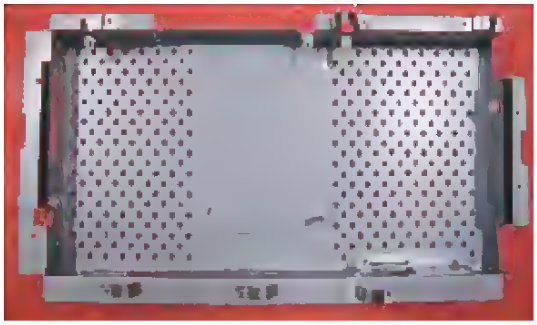	CHECKING THE FOAM AND PUT IT TO THE PRODUCTION LINE. CHECKING THE SHIELDING AND STICK 2* PCS FOAM. PUT THE FLOW CARD TO THE BOARD.
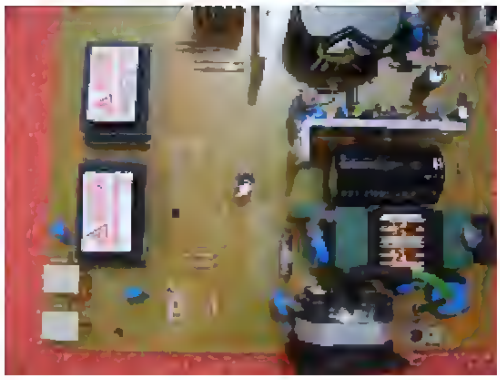	SCAN THE FLOW CARD AND CODE OF P/B INTO THE TMS SYSTEM. INSERT THE JUMP CABLE INTO THE P/B AS LEFT SHOW. CONNECT THE JUMP CABLE AND P/B WITH WHITE GOOEY MARK THE LOCATION WITH COLOR PEN AS LEFT SHOW. PUT IT TO THE PRODUCTION LINE.
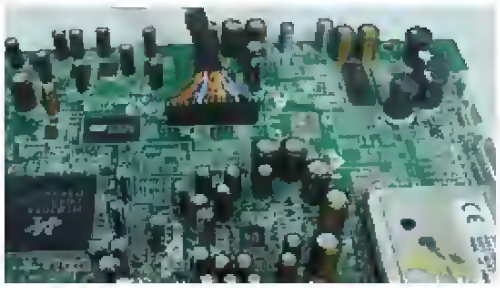 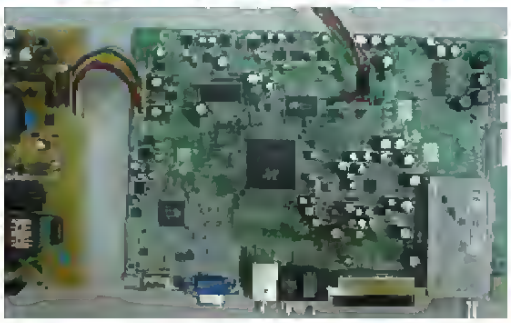 	CHECKING THE M/B AND LVDS CABLE, AND INSERT THE LVDS CABLE INTO THE JOINT OF M/B. INSERT THE M/B-P/B CABLE INTO THE JOINT OF M/B AND P/B. PUT THE CONNECTED M/B AND P/B TO THE SHIELDING, THEN PUT IT TO PRODUCTION LINE.

Downloaded from www.Manualslib.com manuals search engine

Console Features

The Console provides important information about your workout and lets you control the resistance levels while you exercise. The Console features touch control buttons to navigate you through the exercise programs.

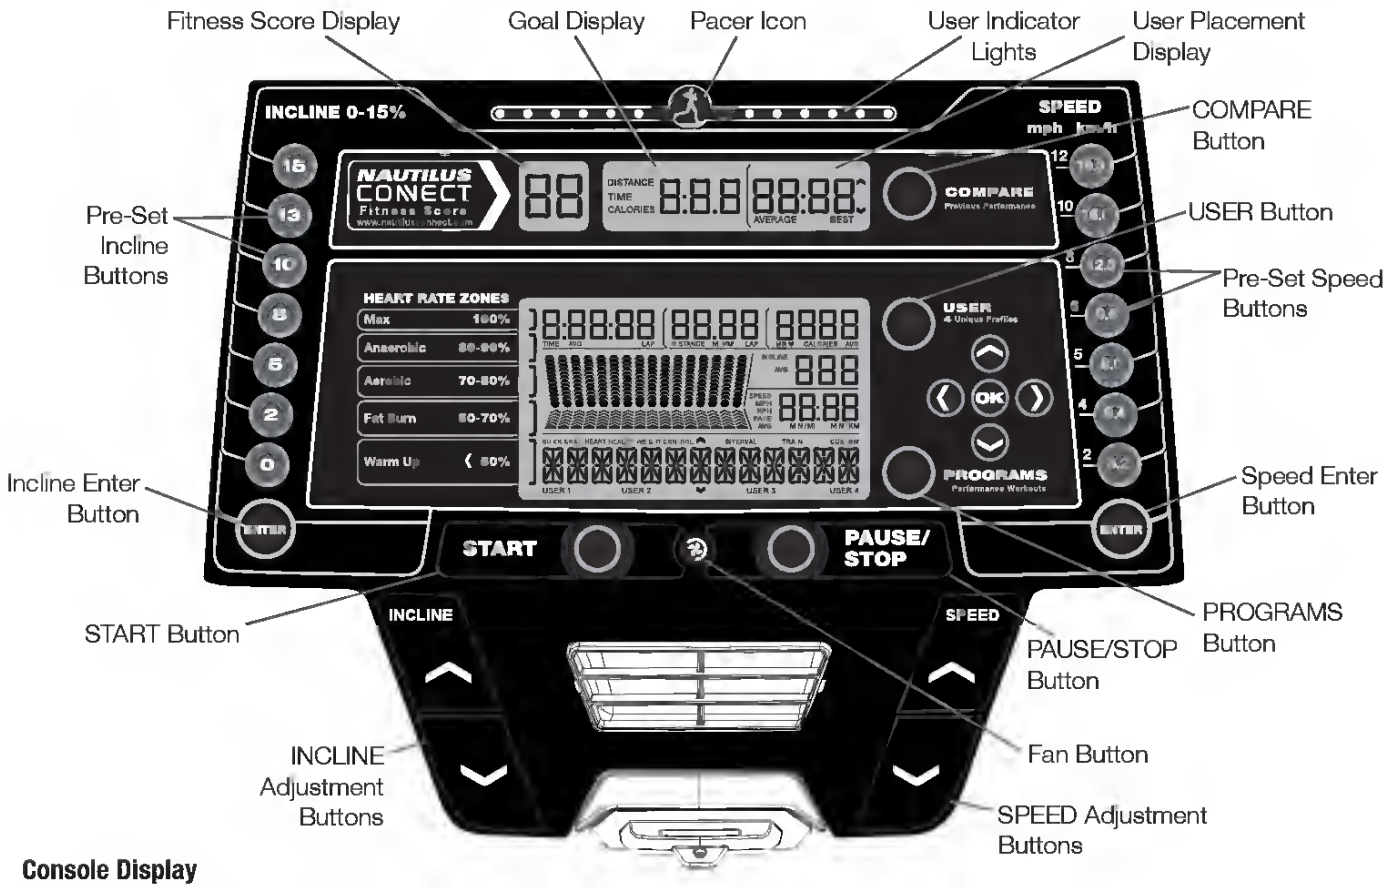

Console Display

Pacer Icon- represents the location of the Pacer during the Workout.

User Indicator Lights- The User indicator lights show where the User is in relation to the Pacer during the Workout.

Fitness Score Display- The Fitness Score Display shows the current Fitness Score of the selected User Profile.

Goal Display-The Goal Display shows the selected type of goal (Distance, Time or Calories) and the value for it.

User Placement Display- The User Placement Display shows the difference between the User and the Pacer. The arrows tell if the User is in front (UP arrow) or behind (DOWN arrow) the Pacer.

COMPARE button- Push to select the desired Workout Pacer: Average, Best, or off.

USER button- Push to select the desired User Profile. The Active User Display will adjust

Increase (▲) button- Increases the current value or moves through the options available

Left (◄) button- Shifts the currently active segment, and moves through options

OK button- Confirms information or a selection

Downloaded from www.Manualslib.com manuals search engine

Inspection

1. Clean gummy or dirty fuel tanks with Briggs & Stratton Carburetor Cleaner #100041 or #100042, or equivalent.
2. Inspect fuel tank for:
   - Corrosion
   - Leaks
   - Broken mounting brackets
3. Check fuel cap and filler neck for:
   - Proper seals
   - Vents
   - Functional quantity gauge (if equipped)
4. Check fuel filter for blockage of any kind.
5. Check fuel shut off valve for proper operation.

Clean or replace parts as required. Fuel filter replacement is recommended annually or any time the fuel system is serviced.

Installation

1. Install tank support to tank. Slip fuel hose under governor link and spark plug wire through hole in support as tank is installed. Torque screws to values listed in *Engine Specifications*.
2. Assemble shut-off valve and fuel filter, if equipped, to fuel hose.
3. Install hose assembly to tank fitting and carburetor fitting with new clamps.
4. Install control panel/trim plate. Torque screws to values listed in *Engine Specifications*.
5. Add small amount of fuel to tank, open shut off valve, and check for leaks. Repair as necessary.
6. Install air cleaner assembly.
7. Start engine and check for leaks. Repair as necessary.

Carburetor Service

LMT Carburetor

Two versions of this carburetor have been used (Figures 25 and 26).
These carburetors have a fixed high speed main jet with a screw for idle mixture and idle speed adjustment. The letters LMT are cast into the body of the carburetor while the identification numbers are stamped into the carburetor mounting flange next to the idle mixture screw or above the fuel inlet.

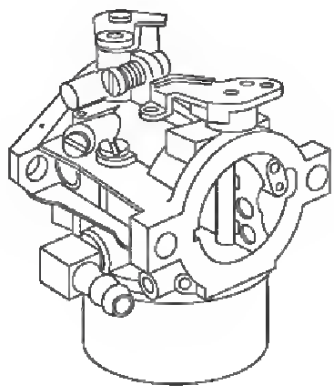

Figure 25

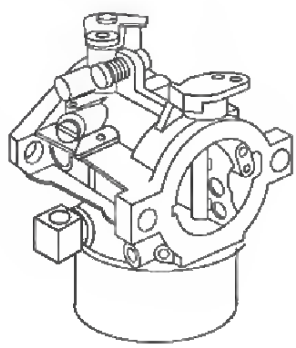

Figure 26

⚠ **WARNING** Before servicing the carburetor or other fuel system components, drain all fuel from the tank and turn OFF the fuel valve (if equipped).

DO NOT attempt to stop the fuel flow by plugging the fuel hose.

Downloaded from www.Manualslib.com manuals search engine

WARNINGS:

- **This appliance must be installed by a qualified electrician/competent person. Safety may be impaired if installation is not carried out in accordance with these instructions.**
- **This appliance must be earthed.**
- **Do not remove the screws from the earth tab extending from the oven mains terminal block (Fig.1).**
- **Before connecting the appliance make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This is situated on the lower front frame of the oven and can be seen upon opening the main cavity door. Alternatively the rating plate may also be found on opening the back or top or top of some models (where applicable)**
- **Do not alter the electrical circuitry of this appliance.**

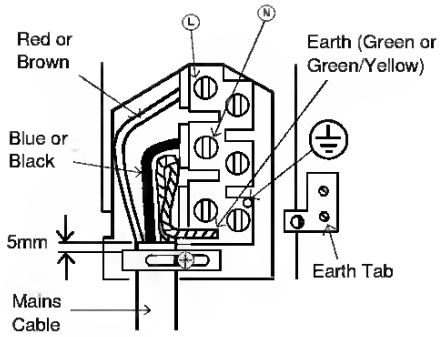

Fig.1

CHOICE OF ELECTRICAL CONNECTION

- There are three possible ways to connect your appliance. In each case the appliance should be operated using at least 6mm^2 twin core and earth PVC insulated multicore cable. Please choose from the most appropriate after reading the different methods:-

a) By connecting the appliance to a cooker point (having a double pole isolating switch with at least 3mm contact separation in all poles and neutral) and protected with a fuse or miniature circuit breaker at your mains fuse box.

Subject to Regional Electricity Company regulations if you wish to connect the oven and hob to the power supply you may use one of the following two methods:-

b) By connecting the appliance together with a hob directly to a cooker point(s). Having a double pole isolating switch with at least 3mm contact separation in all poles and neutral.

c) If you wish to connect an oven and a hob to a cooker point you can by connecting the oven and hob separately to the cooker point. Oven and hob units should be separately connected to a control panel. See Fig. 2.

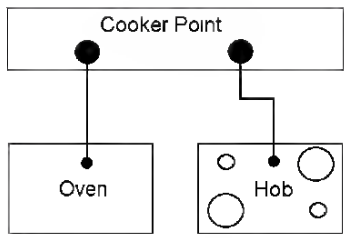

Fig. 2

Downloaded from www.Manualslib.com manuals search engine

3. Select the "**Adapter**" tab. The refresh rate selection field is located in the center at the bottom of the window.

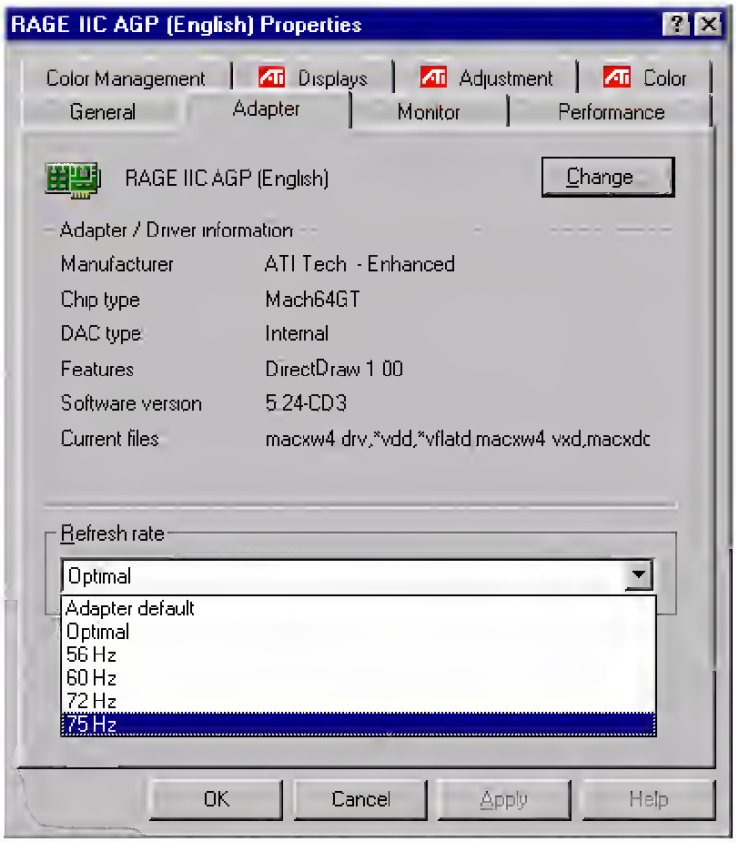

4. Choose a refresh rate from the table with the factory modes, which can be found in the user's guide, and select this in the settings field.
5. In the subsequent windows press "**Change**", "**OK**" and "**Yes**".

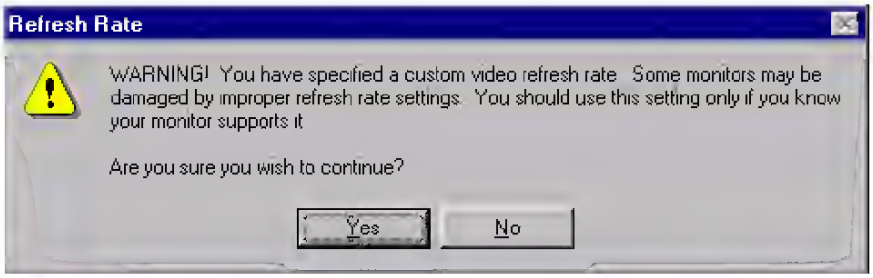
Refresh Rate
WARNING! You have specified a custom video refresh rate. Some monitors may be damaged by improper refresh rate settings. You should use this setting only if you know your monitor supports it.
Are you sure you wish to continue?
Yes
No

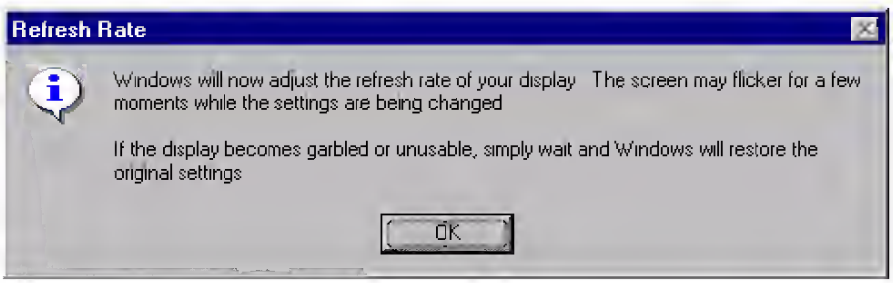
Refresh Rate
Windows will now adjust the refresh rate of your display. The screen may flicker for a few moments while the settings are being changed.
If the display becomes garbled or unusable, simply wait and Windows will restore the original settings.
OK

6. You can now close "**Display Properties**".

Downloaded from www.Manualslib.com manuals search engine

10. Remove the screws to remove the main board. (Fig 15-16)

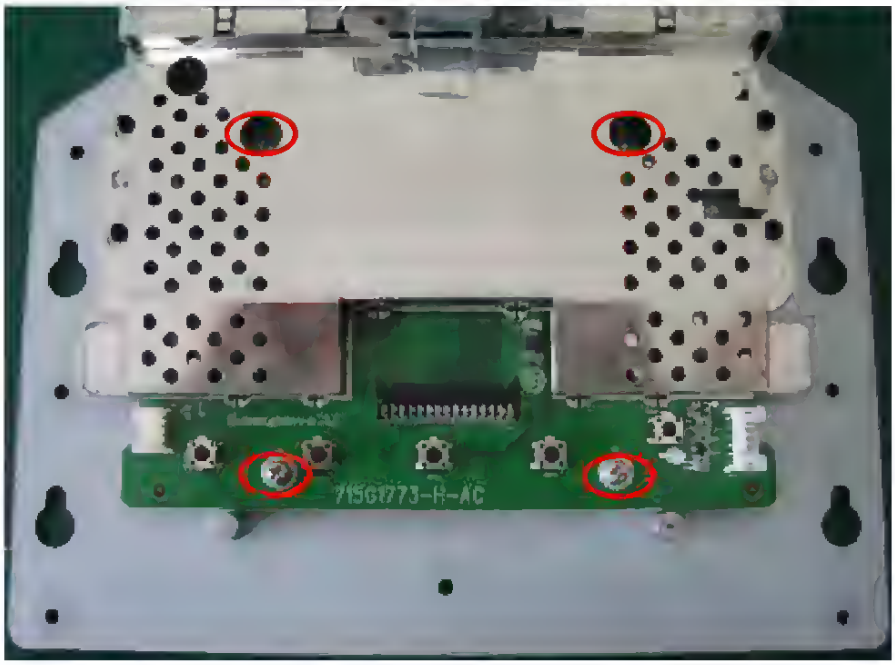

Fig 15

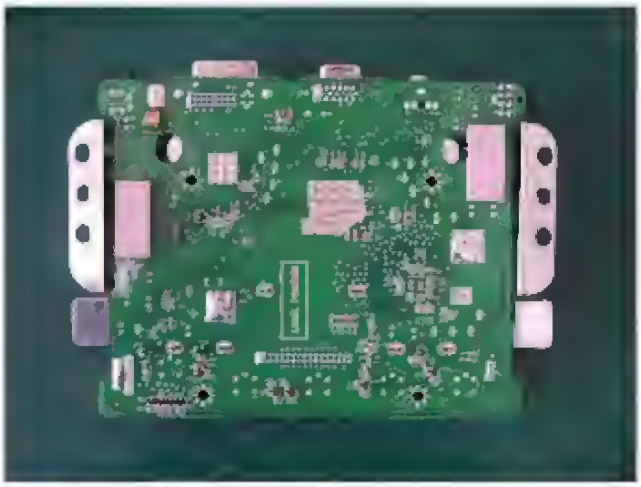

Fig 16

Downloaded from www.Manualslib.com manuals search engine

USING THE TELETEXT

Press button	Result on screen
6 Interrupt	Press the button to change to TV mode. Press the button again to return to teletext mode and to the teletext page.
7 Enlarge	Press the button once to enlarge and view the top half of the page. Press the button the second time to enlarge and view the bottom half of the page. Press the button the third time to return to normal size page
8 Hold	A selected page sometimes contains a few sub-pages The sub-page will automatically move to the next sub-page after about 20 seconds. The total number of sub-pages are indicated at the top right hand corner of the screen. Press the button once to hold page and the second time to release holding of page.
9 Reveal/ Conceal	Press the button once to reveal hidden information (solutions to puzzles, riddles, etc). Press the button the second time to conceal information. This button is applicable only to teletext page with puzzles, riddles, etc.)

Downloaded from www.Manualslib.com manuals search engine

Leak Prevention System

For protection from damage due to water leaks, the dishwasher is equipped with a leak prevention system, the AQUA CONTROL SYSTEM.

In the event of a fault, the safety valve immediately interrupts the supply of water to the appliance and the drain pump switches on. By this means water can neither escape nor overflow. The remaining water in the appliance is automatically pumped out.

⚠ The AQUA CONTROL SYSTEM also works when the appliance is switched off – the appliance must however **not** be disconnected from the mains.

Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

⚠ **WARNING – This appliance must be earthed.**
The manufacturer declines any responsibility should these safety measures not be observed.

Before switching on make sure the electricity supply voltage is the same as that indicated on the appliance rating plate.

To isolate the dishwasher from the mains, remove the mains plug.
Important: The plug must still be accessible after the appliance has been installed.

Changing a fuse

The appliance is supplied with a 13amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13amp ASTA approved (BS 1363A) fuse must be used.

Should the plug need to be replaced for any reason, proceed as described below.

The wires on the mains lead are coloured in accordance with the following code.

Green and Yellow : Earth
Blue : Neutral
Brown : Live

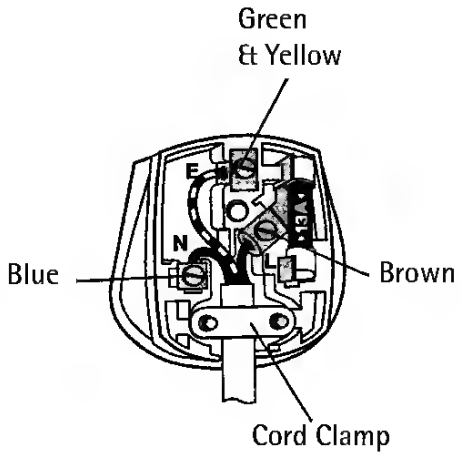

Downloaded from www.Manualslib.com manuals search engine

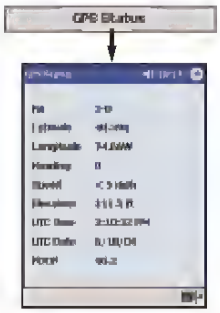

To view your satellite activity at any time, first tap the **GPS Status** option. Here you will receive information on speed, lat/long position, heading, and time and date.

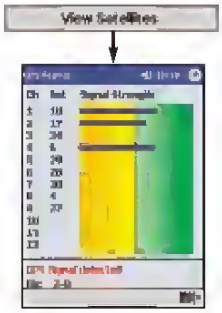

For more satellite acquisition information, tap the **View Satellites** option. To get a 3-D fix (required for CoPilot to locate your position) you must have four satellites "in the green" for several seconds.

To control the speed of your GPS track playbacks, tap the **Track Playback** option. Use the slider bar to speed up or slow down the playback speed.

Tap **Delete GPS Tracks** to delete all gps files from the folder where they are stored (usually the *My Documents* folder on your mobile device or storage card).

Reference: Screens & Toolbars in Guidance Mode on Your Pocket PC

The following is a summary guide to the screens and toolbars you will see on your Pocket PC as you operate CoPilot in Guidance Mode.

Welcome Screen

The *Welcome* screen appears when you first open CoPilot. If you don't want to see it at startup, uncheck **Show this screen at startup**. This screen can be accessed from the Tools menu at any time. *Welcome* screen options are:

- **Going To** to enter a destination and receive guidance
- **Tutorial** for first-time users
- **Help** topics about basics such as trip entry, hardware setup, and options
- **GPS** to set up your GPS and for GPS information
- **Options** to change CoPilot routing, guidance, and map options
- **Live Setup** for live communications

Going To Screen

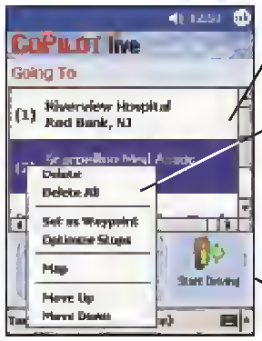

This screen displays a scrollable list of all stops in the current trip, numbered in the order CoPilot will route to them.

Tap and hold the stylus on a stop to open a menu that lets you delete the stop, zoom to it on the map, move it up or down on the list, or make it a way point (an unreported stop that guides your route along preferred roads). You can also optimize the stop order for a more efficient route using this menu.

Tap **Add Stop** to enter another stop in the *Going To* screen, **New Trip** to delete all stops and start a new trip, or **Start Driving** to receive guidance.

Downloaded from www.Manualslib.com manuals search engine

Launching the Management Utility

To access your MSA Fabric Switch 6 using the Management Utility, you must configure it with an IP address using the Array Configuration Utility-XE (ACU-XE), as described in the section titled "Configuring your IP address," and be connected to an IP network. Once configured, use the following procedure to launch the utility:

1. Use Compaq Insight Manager (CIM XE) or enter the IP address of the switch you want to manage into the web browser's address box.
2. Once the Utility is launched, enter the SNMP "Read Community" and "Write Community" strings into the appropriate test boxes.

NOTE: These strings are case-sensitive.

3. Click the **OK** button.

Figure 3-1: SNMP screen

NOTE: If the display properties on your computer system are set to "256 colors," the Community Strings window will appear patterned and unclear. Change your display properties setting to either "True Color (32 bit)" or "High Color (16 bit)" for a sharp, clear image. You will find the display properties setting under Start\Settings\Control Panel\Display\Settings or right-click your desktop and select Active Desktop\Customize\Settings.

Downloaded from www.Manualslib.com manuals search engine

Chapter 3
Diagnostic Tools

This chapter describes software and firmware diagnostic tools available for all Compaq server products. The sections in this chapter are:

- Default Configuration
- Access to Compaq Utilities
- Power-On Self-Test (POST)
- Diagnostics Software
- Drive Array Advanced Diagnostics (DAAD)
- Integrated Management Log
- Rapid Recovery Services
- Remote Service Features
- ROMPaq
- Compaq Insight Manager

Hot-Plug Hard Drives

The following guidelines are to he noted when removing and replacing hot-plug hard drives:

- Never remove a hot-plug hard drive if the LED icon is green. If several drives are used, the system boot drive should be installed in the lowest-numbered bay.
- Never remove more than one hard drive at a time. If the server is set in an array configuration, and a hard drive is replaced, the controller uses data from the other drives in the array to reconstruct data on the replacement drive. If more than one hard drive is removed, a complete data set is not available to reconstruct data on the replacement drive(s).
- Never remove a working hard drive when another drive has been marked as failed by the controller. Permanent data loss occurs. Hard drives that have been failed by the controller are indicated hy the amber drive failure LED icon on the drive tray.
- Never remove a drive while another drive is heing rebuilt. A drive online LED icon flashes green when it is heing rebuilt. A replaced drive is restored from data stored on the other drives.

Downloaded from www.Manualslib.com manuals search engine

Registry Saver

When Registry Saver is executed, the system registry will be saved. Also, you can execute it in a command-line environment to save the registry like "regsave.exe" or "regsave.exe –s" for the silence mode.

Remote Display Application

Remote Display Application displays a Windows CE device screen on a remote desktop. It works with the Windows CE Remote Display Host application. Because the connection is through the network, the network function of the host machine and panel computer must work properly. Via the Remote Display Application you can see the display of the panel computer and control it from a host machine.

Remote Display Host application (cerhost.exe) must be executed on a remote host desktop as shown in the Figure 4.13.

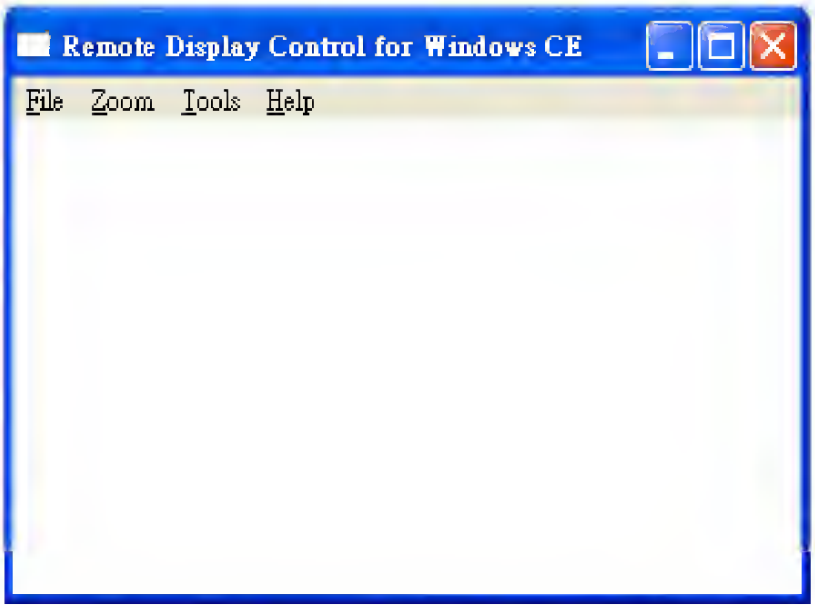

Figure 4.13: Remote Display Host Application

In addition, you must run Remote Display Application on the panel computer as shown in Figure 4.14. Click the "Connect" button and key in the host name or IP address as shown in the Figure 4.15.

Downloaded from www.Manualslib.com manuals search engine

CONEXION DE UN EQUIPO OPCIONAL

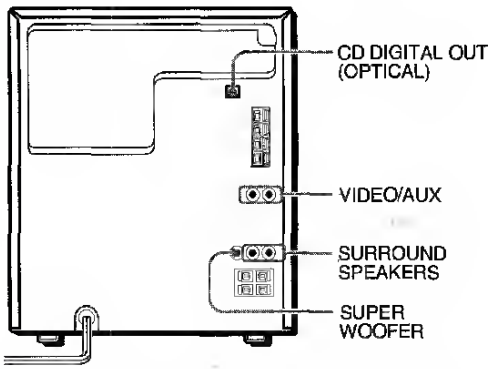

Consulte el manual de instrucciones del equipo conectado para tener más detalles.
- Los cables de conexión no han sido suministrados. Obtenga los cebles de conexión necesarios.
- Consulte con su concesionario AIWA en cuanto al equipo opcional.

TOMAS VIDEO/AUX

Esta unidad puede introducir señales de sonido analógico a través de estas tomas.
Utilice un cable con clavijas fono RCA para conectar equipos de audio (giradiscos, reproductores de discos láser, reproductores de minidiscos, vídeos, televisores, etc.)
Conecte la clavija roja a la toma R y la blanca a la toma L.

Cuando conecte un giradiscos
Utilice un giradiscos Aiwa con amplificador ecualizador incorporedo.

TOMA CD DIGITAL OUT (OPTICAL)

Esta unidad puede dar salida a señales de sonido digital de discos compactos e través de esta toma. Utilice un cable óptico para conecter el equipo de audio digital (emplificedor digital, platina de cinta audiodigital, grabadora de minidiscos, etc.)
Quite la tapa contra el polvo ⓐ de la toma CD DIGITAL OUT (OPTICAL). Luego, conecte la clavija del cable óptico a la toma CD DIGITAL OUT (OPTICAL).

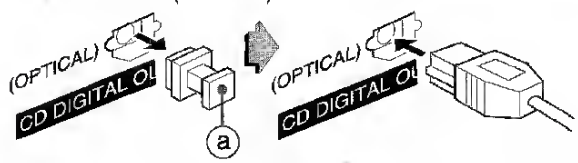

Cuando no se utilice la toma CD DIGITAL OUT (OPTICAL)
Ponga la tapa contra el polvo.

TOMA SUPER WOOFER

Conecte un altavoz de subgraves activo opcional con un amplificador incorporado a esta toma

ESCUCHA DE FUENTES DE SONIDO EXTERNAS

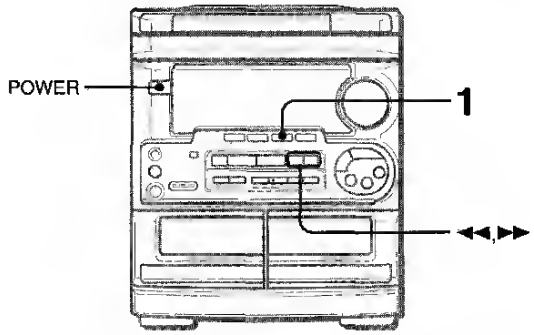

Para hacer la reproducción en el equipo conectado a las tomas VIDEO/AUX, siga el procedimiento siguiente·

***1* Pulse el botón VIDEO/AUX.**
VIDEO eperece en el visualizador.

***2* Haga la reproducción en el equipo conectado.**

Para cambiar el nombre de una fuente de sonido en el visualizador
Cuando se pulse el botón VIDEO/AUX, VIDEO se visualizará inicialmente. Esto podrá ser cambiado por AUX o TV
Cuando la alimentación esté conectada, pulse el botón POWER mientras pulsa el botón VIDEO/AUX.
Repita el procedimiento para seleccionar uno de los nombres.

Para ajustar el nivel del sonido de la fuente de sonido externa
Cuando el nivel del sonido de la fuente extema sea muy superior o muy interior al nivel del sonido de otras fuentes de sonido, ajústelo de la forma siguiente.
1 Pulse el botón VIDEO/AUX y haga la reproducción en el equipo
2 Pulse el botón ◄◄ o ►► pare que el nivel del sonido sea el mismo que el de otras fuentes.

Downloaded from www.Manualslib.com manuals search engine

CoPilot Technical Support

After registering your software (see p.42), you're entitled to technical support and discounts on new versions of CoPilot. Check out ALK's web site for technical support documentation and posted answers to common questions. If the web site does not provide an answer to your question, technical support for registered users is available during standard business hours (9.00 am - 5:00 pm Monday-Friday). You should be at your computer and have your **Installation Product Key** available when you contact us (this Product Key can be found on the front or back cover of the printed *Quick Start Guide* that came with the product or on the supplied Product Key card).

Please be sure to reach us using the contact information for your region shown below. We are sorry, but our support staff in ALK's regional offices cannot respond to requests for assistance outside the areas they serve.

North America - Web: www.alk.com, E-mail: cpsupport@alk.com,
Fax: 609-252-8166, Phone: 888-872-8876

Europe - Web: www.alk.eu.com, E-mail: uksupport@alk.eu.com,
Postal: Suite B, 4 Bloomsbury Square, London WC1A 2RP, UK
Phone: +44 (0)207 404 4222

Australia - Web: www.travroute.com.au/support.html,
E-mail: support@travroute.com.au, Phone: 03-9855-1498

Licence Upgrade

The CoPilot desktop software you purchased contains street-level maps for Europe or the United States. Licences are available for the following European and North American regions:

(1) **Major region** - Detailed street-level maps for any of the following regions: Alps Ski Region, Benelux (Belgium, Canada, the Netherlands, and Luxembourg), Canada, France, Germany, Italy, Pyrenees, Scandinavia, and the United Kingdom.

(2) **Pan-Europe** - Complete street-level maps for all of Europe

(3) **United States** - Complete street-level maps for the entire U.S.

If you purchased CoPilot with a single region licence and later want to use street maps from other regions, you will need to purchase an upgrade licence from your dealer. After purchasing a CoPilot region, you will need to go through the activation process

Adding a Data Region

If you have purchased an additional data region after your initial purchase of CoPilot, you will need to modify the original ("Base") installation and activate the new region.

IMPORTANT: You can only use your Expansion Product Key AFTER you have installed and activated CoPilot with a Product Key for the Base product. If you have not yet installed CoPilot, please do so first and then follow the instructions below.

ON YOUR DESKTOP/LAPTOP:

1. Insert your CoPilot **Install Disc** into your CD-ROM drive.
2. Select **Modify** and click **Next** when the InstallShield Wizard appears.
3. Enter your Expansion Product Key when prompted to enter a **Product Key**.
4. Follow the on-screen instructions for installing to your desktop and Smartphone.

Downloaded from www.Manualslib.com manuals search engine

This page intentionally left blank

8.5 ACER_LCD_H233H_SCHEMATICS_INTERFACE_DVI & DDC INTERFACE

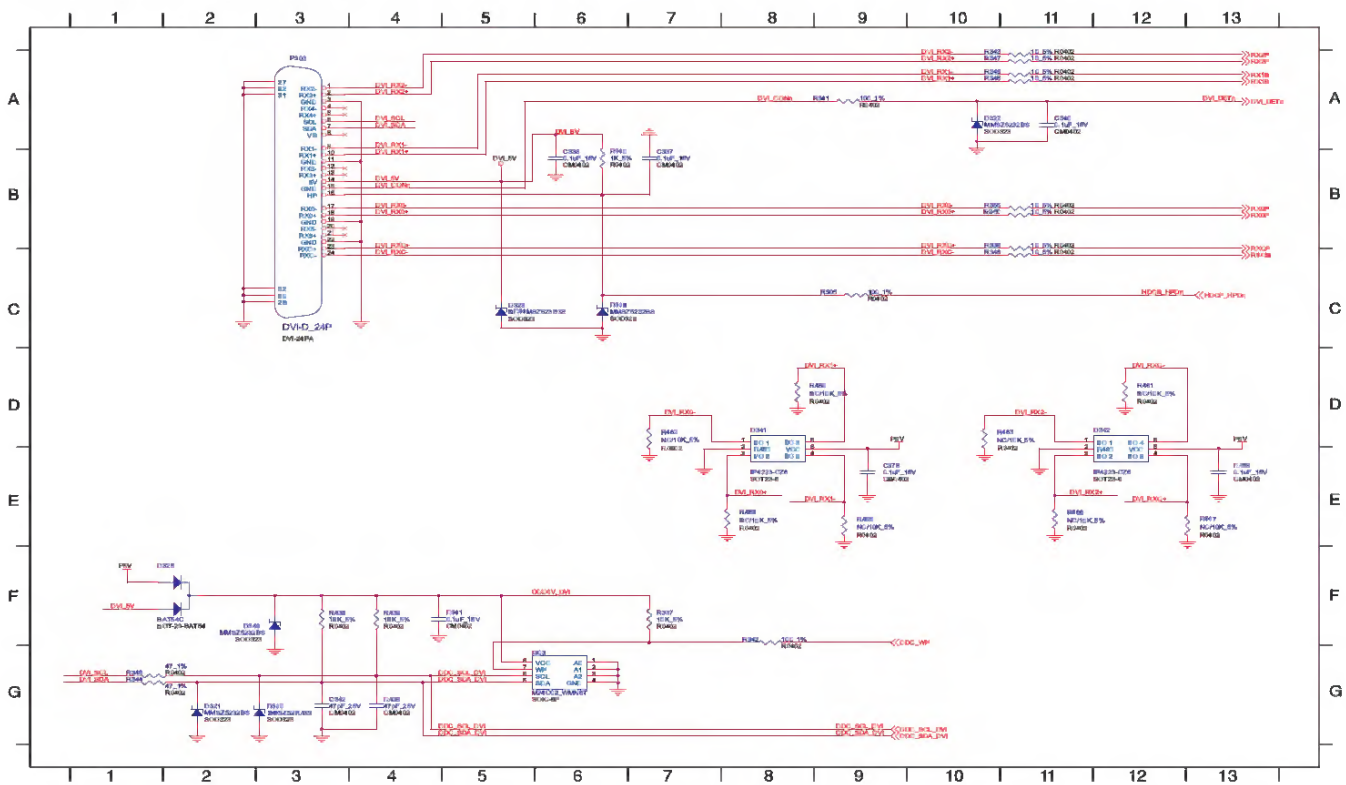

PCB No. 6832203R00P01

Downloaded from www.ManualsLib.com manuals search engine

Gold Support for Windows NT provides the highest levels of responsiveness and problem-resolution capabilities, designed specifically for business-critical environments.

This service increases responsiveness and expedites problem resolution by routing critical service requests directly to a dedicated Gold Support Team and ensuring comprehensive problem management by a high-level, named Technical Account Manager. The team is available around the clock to give your customer's critical calls the highest priority within the Customer Support Center (CSC), providing continuous effort until the problem is resolved. The service also features electronic access to resources and proactive software support.

It includes all of the features of Silver Support for Windows NT and adds highly personalized services, including:

- A named Technical Account Manager who serves as your customer's single point of contact at our Customer Support Center and oversees technical support
- A dedicated Gold Support Team staffed by Microsoft-trained and certified specialists to provide top-priority response for your customer's critical calls around the clock
- Callbacks within 30 minutes for critical calls, plus continuous effort
- Electronic access for submitting routine or non-critical service requests, exchanging files, searching the software product databases, and receiving software patches
- Proactive software support, including information on newly released patches and updates, plus upgrade impact planning
- Multivendor support that covers the full range of products on the Supported Products List
- System Healthcheck to identify performance or security issues.

Compaq offers additional services that complement Gold Support and help create a comprehensive support solution for Windows NT environments.

- **System Management Support** provides the services of a specialist to complement System Healthcheck service.
- **On-Site/Per Event Services** provides access to over 1,500 Microsoft Certified Systems Engineers (MCSEs) to address difficult or specialized challenges.
- **Installation & Start-Up** provides most of the basic installation and start-up work for Windows NT environments.

For more information on Gold Support for Windows NT, go to:

Internal Web Link: http://www-amcs.shr.dec.com/mkt/Svc_gold.html
External Web Link: http://www.digital.com/services/mcs/mcs_sntgold.htm

- **System Health Check for Windows NT**

  System Healthcheck is the quickest, most cost-effective way to identify security and performance problems -- before they affect your customer's critical business operations.

  Advanced, expert system-based tools are used to collect information on your customer's system or LAN configuration. The collected data is analyzed against accepted practices, and the findings -- together with recommendations for corrective action -- are documented in a summary report. A technical specialist reviews and discusses these findings with your customer.

  For more information on System Health Check for Windows NT, go to:

  External Web Link: http://www.digital.com/info/services/mcs/mcs_srvhcheck.htm

Downloaded from www.Manualslib.com manuals search engine

Water drain

Drain hose

The drain hose must not be kinked, crushed or entangled.

- Connecting the drain hose:
  - Maximum permitted height: 1 metre.
  - Minimum required height 40 cm above the lower edge of the machine.

Extension hoses

- Extension hoses are available from your dealer or customer service. The internal diameter of the extension hoses must be 19 mm to ensure that the function of the appliance is not impeded.
- Extension hoses may be laid a maximum of 3 metres horizontally; the maximum permitted height for the connection for the drain hose is then 85 cm.

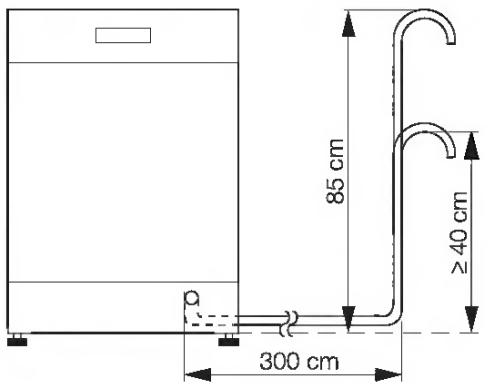

Sink outlet connection

- The outlet of the drain hose (ø 19 mm) fits all commonly available sink outlet spigot types. The outer diameter of the spigot connection must be at least 15 mm.
- The drain hose must be fixed to the sink outlet connection using the hose clamp supplied.

If the dishwasher is fitted at a high position

If the dishwasher is installed at a high level, and the drainhose connection is less than 30 cm from the bottom of the appliance, adapter kit ET 111099520 must be fitted. This is available from Customer Service.

Water drain into wash basins (only possible with free-standing appliances)

In the case that you wish to hang the drain hose in a wash basin, use a detachable hose elbow. You can obtain this from AEG customer service under spare part number ET 646 069 190.

☞ **1.** Fit the elbow to the drain hose.

2. Secure the drain hose against sliding off the edge of the wash basin. Pass a piece of cord through the hose elbow and fix it to the wall or the tap.

Downloaded from www.Manualslib.com manuals search engine

PUESTA EN HORA DEL RELOJ

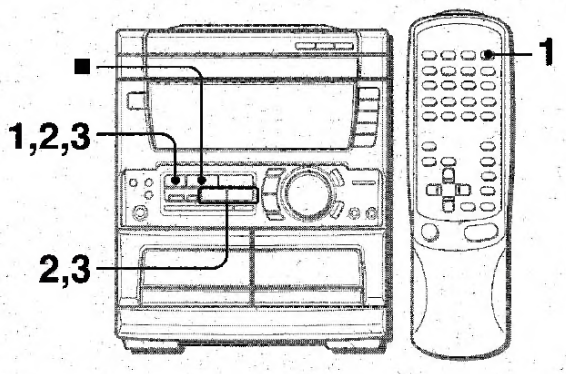

1 **Pulse el botón CLOCK del control remoto, y luego pulse el botón II SET antes de que pasen 4 segundos.**

2 **Pulse el botón ◄◄ DOWN o ►► UP para designar la hora, y luego pulse el botón II SET.**
La hora deja de parpadear y empieza a parpadear el minuto.

3 **Pulse el botón ◄◄ DOWN o ►► UP para designar el minuto, y luego pulse el botón II SET.**
El minuto deja de parpadear en el visualizador y el reloj empieza desde 00 segundos.

Para visualizar la hora actual
Pulse el botón CLOCK del control remoto. El reloj se visualizará durante 4 segundos.
Sin embargo, la hora no se podrá visualizar durante la grabación.

Para cambiar al modo de 24 horas
Pulse el botón CLOCK del control remoto y luego pulse el botón ■ antes de que pasen 4 segundos.
Repita el mismo procedimiento para reponer el modo de 12 horas.

Si parpadea la visualización del reloj
Esto se deberá a un interrupción en el suministro de alimentación. La hora tendrá que ponerse de nuevo.
Si la alimentación se interrumpe durante más de 24 horas aproximadamente, todos los ajustes almacenados en la memoria después de adquirir la unidad tendrán que ajustarse otra vez.

AJUSTE DEL TEMPORIZADOR

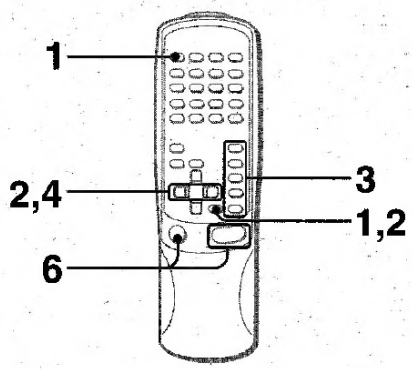

La unidad podrá encenderse a la hora especificada todos los días gracias al temporizador incorporado.

Preparación
Asegúrese de que la hora del reloj sea correcta.

Utilice el control remoto.

1 **Pulse una vez el botón TIMER para visualizar ⏲, y pulse el botón II SET antes de que pasen 4 segundos.**
⏲ se visualizará y la hora parpadeará.

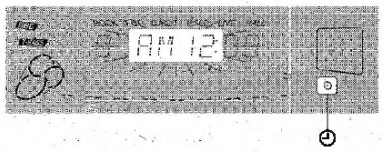

NOTA
Si pulsa el botón II SET después de 4 segundos tal vez empiece otra operación.

2 **Designe la hora de encendido del temporizador pulsando al botón I◄◄ DOWN o ►►I UP y luego pulse el botón II SET. Repita el mismo procedimiento para designar al minuto de encendido del temporizador.**

Después de designar la hora de encendido del temporizador, uno de los nombres de las fuentes de sonido parpadeará durante 4 segundos en el visualizador.

3 **Antes de que pasen 4 segundos, pulse uno de los botones de función para seleccionar una fuente de sonido.**
El nombre de la fuente de sonido seleccionada parpadeará durante 4 segundos. En este momento, el botón de función seleccionado no se encenderá.
- Si este paso no se completa antes de que pasen 4 segundos, repita desde el paso 1.
- Si se pulsa el botón TUNER, la banda no se podrá seleccionar en este paso.

Downloaded from www.Manuatstib.com manuals search engine